



# BookletChart<sup>TM</sup>

## **Hudson and East Rivers - Governors Island to 67th Street** (NOAA Chart 12335)



A reduced scale NOAA nautical chart for small boaters. When possible, use the full size NOAA chart for navigation.

- ☒ Complete, reduced scale nautical chart
- ☒ Print at home for free
- ☒ Convenient size
- ☒ Up to date with all Notices to Mariners
- ☒ United States Coast Pilot excerpts
- ☒ Compiled by NOAA, the nation's chartmaker.

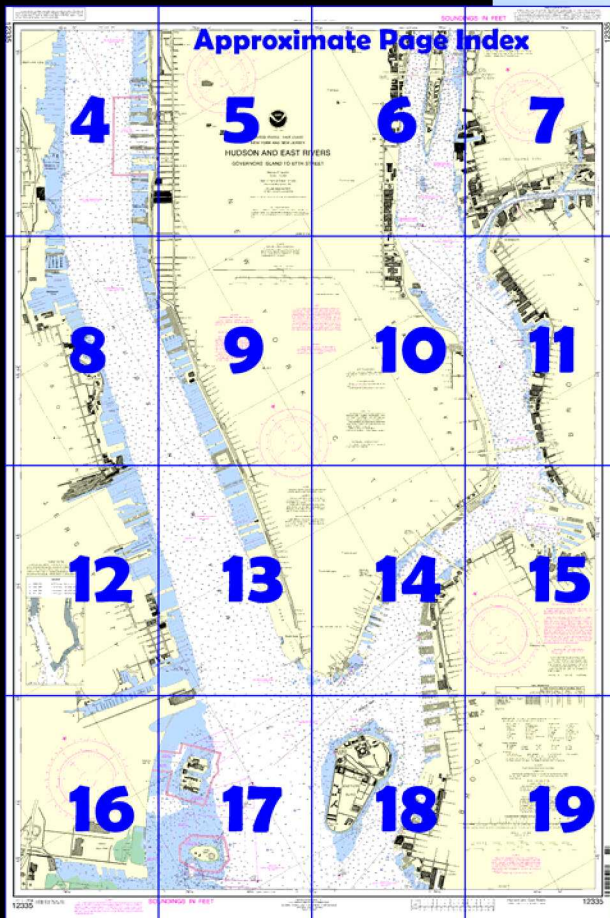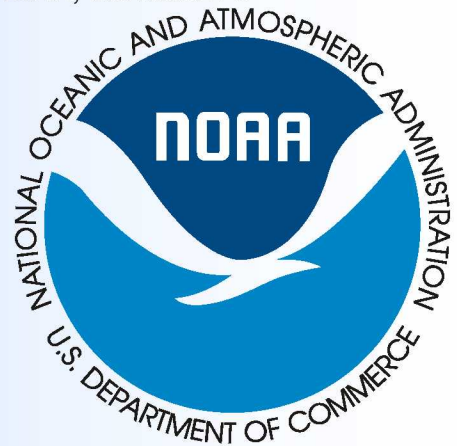

*Home Edition (not for sale)*



### What are Nautical Charts?

Nautical charts are a fundamental tool of marine navigation. They show water depths, obstructions, buoys, other aids to navigation, and much more. The information is shown in a way that promotes safe and efficient navigation. Chart carriage is mandatory on the commercial ships that carry America's commerce. They are also used on every Navy and Coast Guard ship, fishing and passenger vessels, and are widely carried by recreational boaters.

### What is a BookletChart™?


This BookletChart is made to help recreational boaters locate themselves on the water. It has been reduced in scale for convenience, but otherwise contains all the information of the full-scale nautical chart. The bar scales have also been reduced, and are accurate when used to measure distances in this BookletChart. See the Note at the bottom of page 5 for the reduction in scale applied to this chart.

Whenever possible, use the official, full scale NOAA nautical chart for navigation. Nautical chart sales agents are listed on the Internet at <http://www.NauticalCharts.NOAA.gov>.

This BookletChart does NOT fulfill chart carriage requirements for regulated commercial vessels under Titles 33 and 44 of the Code of Federal Regulations.

### Notice to Mariners Correction Status

This BookletChart has been updated for chart corrections published in the U.S. Coast Guard Local Notice to Mariners, the National Geospatial Intelligence Agency Weekly Notice to Mariners, and, where applicable, the Canadian Coast Guard Notice to Mariners. Additional chart corrections have been made by NOAA in advance of their publication in a Notice to Mariners. The last Notices to Mariners applied to this chart are listed in the Note at the bottom of page 7. Coast Pilot excerpts are not being corrected.

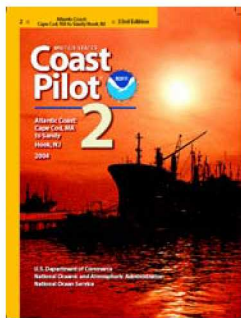

#### **[Coast Pilot 2, Chapter 12 excerpts]**

(4) **Hudson River**, sometimes called **North River** in New York City, has its source in the Adirondack Mountains, about 275 miles along its course from a junction with East River at The Battery, N.Y., and flows in a general southerly direction into New York Upper Bay. Troy Lock and Dam, 134 miles above The Battery, permits vessels to pass from tidewater to the upper river and the New York State Canal System. The river water is usually fresh as far south as Poughkeepsie, halfway from

Troy Lock and Dam to The Battery.

(5) New York City extends along the eastern bank of Hudson River for a distance of about 14 miles above The Battery. For about 5 miles northward from The Battery, the New York waterfront is an almost continuous line of wharves and piers, some of which can accommodate the largest transatlantic liners.

(6) On the opposite side of Hudson River from New York City are Jersey City, Hoboken, Weehawken, Guttenberg, Hudson Heights, Edgewater, and Fort Lee; this entire stretch of about 9 miles is lined with piers.

(7) The lower Hudson River has depths of 43 feet or more in midchannel from deep water in Upper New York Bay off Ellis Island to the upper limit of New York City's major wharves at 59th Street, about 5.3 miles above the entrance. Above this point, the Federal project depth is 32 feet to Albany, except for that section of the channel along the New Jersey Weehawken-Edgewater waterfront between 85th Street and 156th Street, Manhattan, where the project depth is 30 feet.

(8) The lighted buoys marking the Hudson River channel are replaced during the winter by smaller lighted ice buoys or unlighted buoys.

(9) The bridges over Hudson River from New York to Albany have either fixed or suspension spans.

(10) The limiting bridge clearance over the lower Hudson River is 139 feet, at the Tappan Zee Bridge (IS 87/287). The middle Hudson River has a limiting bridge clearance of 137 feet at the Mid-Hudson Bridge (US Route 44) at Poughkeepsie. The upper Hudson River has a limiting bridge clearance of 135 feet at the Castleton-on-Hudson Bridge (New York State Thruway/IS 90 E-W). The least clearance of the overhead cables is 145 feet.

(11) General anchorages begin 5 miles above The Battery and extend upriver for about 10 miles.

(13) A buoyed anchorage, 400 feet wide and 2,400 feet long, with depths of 32 feet is on the east side of the channel just above Stuyvesant, 111 miles above The Battery and 15 miles below Albany.

(14) Numerous fishtraps are planted each spring, usually from about mid-March to mid-May, during the seasonal run of shad to the spawning grounds in the upper Hudson. The charts show the fishtrap areas in the 30-mile stretch beginning about 5 miles above The Battery and extending upriver to Stony Point; Corps of Engineers permits are required for the placing of shad nets and poles in the charted areas. Outer limits of the nets usually are marked by flags during the day and by lights during the night. Caution is advised when navigating a fishtrap area because broken-off poles from previous traps may remain under the surface.

(15) Navigation of the river is easy as far north as Kingston, but above Kingston it is more difficult because of the numerous steep-to shoals and middle grounds. In general tows are apt to follow the shoreline which is most favorable as regards wind and current; with a strong northwest wind, tows will follow the west shore regardless of the direction in which they are traveling.

(16) The tides in Hudson River are affected by freshets, winds, and droughts. Because of these variables the predictions given in the Tide Tables for points above George Washington Bridge are based upon averages for the 6-month period, May to October, when the freshwater discharge is at a minimum.

(18) The currents in Hudson River are influenced by the same variables that affect the tides. The times of slack water and the velocities and durations of flood and ebb are subject to extensive changes; the times of strengths are less likely to be affected. The currents usually set fair with the channels except in the vicinities of bends and wharves.

(19) Velocities of currents are 1.4 knots flood and 1.4 knots ebb northwest of The Battery, 1.6 and 2.2 knots at George Washington Bridge, 0.9 and 1.1 knots at Newburgh, 1.1 and 1.2 knots at Poughkeepsie, 1.3 and 1.6 knots at Kingston, and 0.3 knot flood and 0.8 knot ebb at Albany. Near Troy Lock and Dam, the current does not flood and the ebb has a velocity of 0.7 knot. These values are for the summer when the freshwater discharge is at a minimum.

(20) Daily current predictions for The Narrows, New York Harbor, are given in the Tidal Current Tables. Predictions for places along Hudson River may be obtained by applying the differences and ratios listed for these places in the tables. The directions and velocities of the currents throughout New York Harbor for every hour of the tidal cycle are shown on the Tidal Current Charts, New York Harbor.

# Table of Selected Chart Notes

Corrected through NM Apr. 18/09  
Corrected through LNM Apr. 07/09

## NOTE D

Soundings within the magenta dashed line are reported and should be used with caution.

## HEIGHTS

Heights in feet above Mean High Water.

## HORIZONTAL DATUM

The horizontal reference datum of this chart is North American Datum of 1983 (NAD 83), which for charting purposes is considered equivalent to the World Geodetic System 1984 (WGS 84). Geographic positions referred to the North American Datum of 1927 must be corrected an average of 0.369" northward and 1.502" eastward to agree with this chart.

## RADAR REFLECTORS

Radar reflectors have been placed on many floating aids to navigation. Individual radar reflector identification on these aids has been omitted from this chart.

## AIDS TO NAVIGATION

Consult U.S. Coast Guard Light List for supplemental information concerning aids to navigation.

## Mercator Projection

Scale 1:10,000

North American Datum of 1983  
(World Geodetic System 1984)

SOUNDINGS IN FEET  
AT MEAN LOWER LOW WATER

## CAUTION

### SUBMARINE PIPELINES AND CABLES

Charted submarine pipelines and submarine cables and submarine pipeline and cable areas are shown as:



Additional uncharted submarine pipelines and submarine cables may exist within the area of this chart. Not all submarine pipelines and submarine cables are required to be buried, and those that were originally buried may have become exposed. Mariners should use extreme caution when operating vessels in depths of water comparable to their draft in areas where pipelines and cables may exist, and when anchoring, dragging, or trawling. Covered wells may be marked by lighted or unlighted buoys.

## PLANE COORDINATE GRID

(based on NAD 1927)

New York State Grid, Long Island Zone, is indicated by dotted ticks at 5,000 foot intervals. The last three digits have been omitted.

## CAUTION

### BASCULE BRIDGE CLEARANCES

For bascule bridges, whose spans do not open to a full upright or vertical position, unlimited vertical clearance is not available for the entire charted horizontal clearance.

## WARNING

The prudent mariner will not rely solely on any single aid to navigation, particularly on floating aids. See U.S. Coast Guard Light List and U.S. Coast Pilot for details.

## FISH TRAP AREAS

Boundary lines of fish trap areas are shown thus: Submerged piling may exist in these areas.

## CAUTION

Temporary changes or defects in aids to navigation are not indicated on this chart. See Local Notice to Mariners. During some winter months or when endangered by ice, certain aids to navigation are replaced by other types or removed. For details see U.S. Coast Guard Light List.

## CAUTION

Improved channels shown by broken lines are subject to shoaling, particularly at the edges.

## SUPPLEMENTAL INFORMATION

Consult U.S. Coast Pilot 2 for important supplemental information.

## CAUTION

Limitations on the use of radio signals as aids to marine navigation can be found in the U.S. Coast Guard Light Lists and National Geospatial-Intelligence Agency Publication 117. Radio direction-finder bearings to commercial broadcasting stations are subject to error and should be used with caution. Station positions are shown thus:  
○ (Accurate location)    ◐ (Approximate location)

## NOTE B

The minimum authorized depth, at M L L W, over the E. 63rd Street Tunnel are 45 feet on the west side and 35 feet on the east side of Roosevelt Island.

## NOTE C

The U.S. Coast Guard operates a mandatory Vessel Traffic Services (VTS) system in the New York Bay and surrounding areas. Vessel operating procedures and designated radiotelephone frequencies are published in 33 CFR 161, the U.S. Coast Pilot, and/or the VTS User's Manual. Mariners should consult these sources for applicable rules and reporting requirements. Although mandatory VTS participation is limited to the navigable waters of the United States, certain vessels are encouraged or may be required, as a condition of port entry, to report beyond this area to facilitate vessel traffic management within the VTS area.

## NOTE Z

### NO-DISCHARGE ZONE, 40 CFR 140

The State of New York waters in the Hudson River from the Battery in Manhattan to the Federal Dam in Troy are designated a No-Discharge Zone (NDZ).

Under the Clean Water Act, Section 312, all vessels operating within a No-Discharge Zone (NDZ) are completely prohibited from discharging any sewage, treated or untreated, into the waters. All vessels with an installed marine sanitation device (MSD) that are navigating, moored, anchored, or docked within a NDZ must have the MSD disabled to prevent the overboard discharge of sewage (treated or untreated) or install a holding tank. Regulations for the NDZ are contained in the U.S. Coast Pilot. Additional information concerning the regulations and requirements may be obtained from the Environmental Protection Agency (EPA) web site: [http://www.epa.gov/owow/oceans/regulatory/vessel\\_sewage/](http://www.epa.gov/owow/oceans/regulatory/vessel_sewage/).

## NOTE A

Navigation regulations are published in Chapter 2, U.S. Coast Pilot 2. Additions or revisions to Chapter 2 are published in the Notice to Mariners. Information concerning the regulations may be obtained at the Office of the Commander, 1st Coast Guard District in Boston, MA or at the Office of the District Engineer, Corps of Engineers in New York, NY. Refer to charted regulation section numbers.

Additional information can be obtained at [nauticalcharts.noaa.gov](http://nauticalcharts.noaa.gov).

## SOURCE DIAGRAM

The outlined areas represent the limits of the most recent hydrographic survey information that has been evaluated for charting. Surveys have been banded in this diagram by date and type of survey. Channels maintained by the U.S. Army Corps of Engineers are periodically resurveyed and are not shown on this diagram. Refer to Chapter 1, United States Coast Pilot.

## POLLUTION REPORTS

Report all spills of oil and hazardous substances to the National Response Center via 1-800-424-8802 (toll free), or to the nearest U.S. Coast Guard facility if telephone communication is impossible (33 CFR 153).

## AUTHORITIES

Hydrography and topography by the National Ocean Service, Coast Survey, with additional data from the Corps of Engineers, and U.S. Coast Guard.

## CAUTION

This chart has been corrected from the Notice to Mariners (NM) published weekly by the National Geospatial-Intelligence Agency and the Local Notice to Mariners (LNM) issued periodically by each U.S. Coast Guard district to the dates shown in the lower left hand corner. Chart updates corrected from Notice to Mariners published after the dates shown in the lower left hand corner are available at [nauticalcharts.noaa.gov](http://nauticalcharts.noaa.gov).

This nautical chart has been designed to promote safe navigation. The National Ocean Service encourages users to submit corrections, additions, or comments for improving this chart to the Chief, Marine Chart Division (N/CS2), National Ocean Service, NOAA, Silver Spring, Maryland 20910-3282.

## TIDAL INFORMATION

PLACE		Height referred to datum of soundings (MLLW)		
NAME	(LAT/LONG)	Mean Higher High Water	Mean High Water	Mean Low Water
		feet	feet	feet
East 41st St. Pier	(40°45'N/73°56'W)	4.9	4.5	0.2
East 27th St., Bellevue Hospital	(40°44'N/73°58'W)	4.7	4.4	0.2
Wallabout Bay	(40°42'N/73°59'W)	4.8	4.5	0.2
Governors Island	(40°42'N/74°01'W)	4.9	4.6	0.2
The Battery	(40°42'N/74°01'W)	5.1	4.7	0.2
Dashes (- - -) located in datum columns indicate unavailable datum values for a tide station. Real-time water levels, tide predictions, and tidal current predictions are available on the Internet from <a href="http://tidesandcurrents.noaa.gov">http://tidesandcurrents.noaa.gov</a> . (Mar 2009)				

12335





SCALE 1:10,000  
Nautical Miles

## North

Nautical Miles

0  
Yards

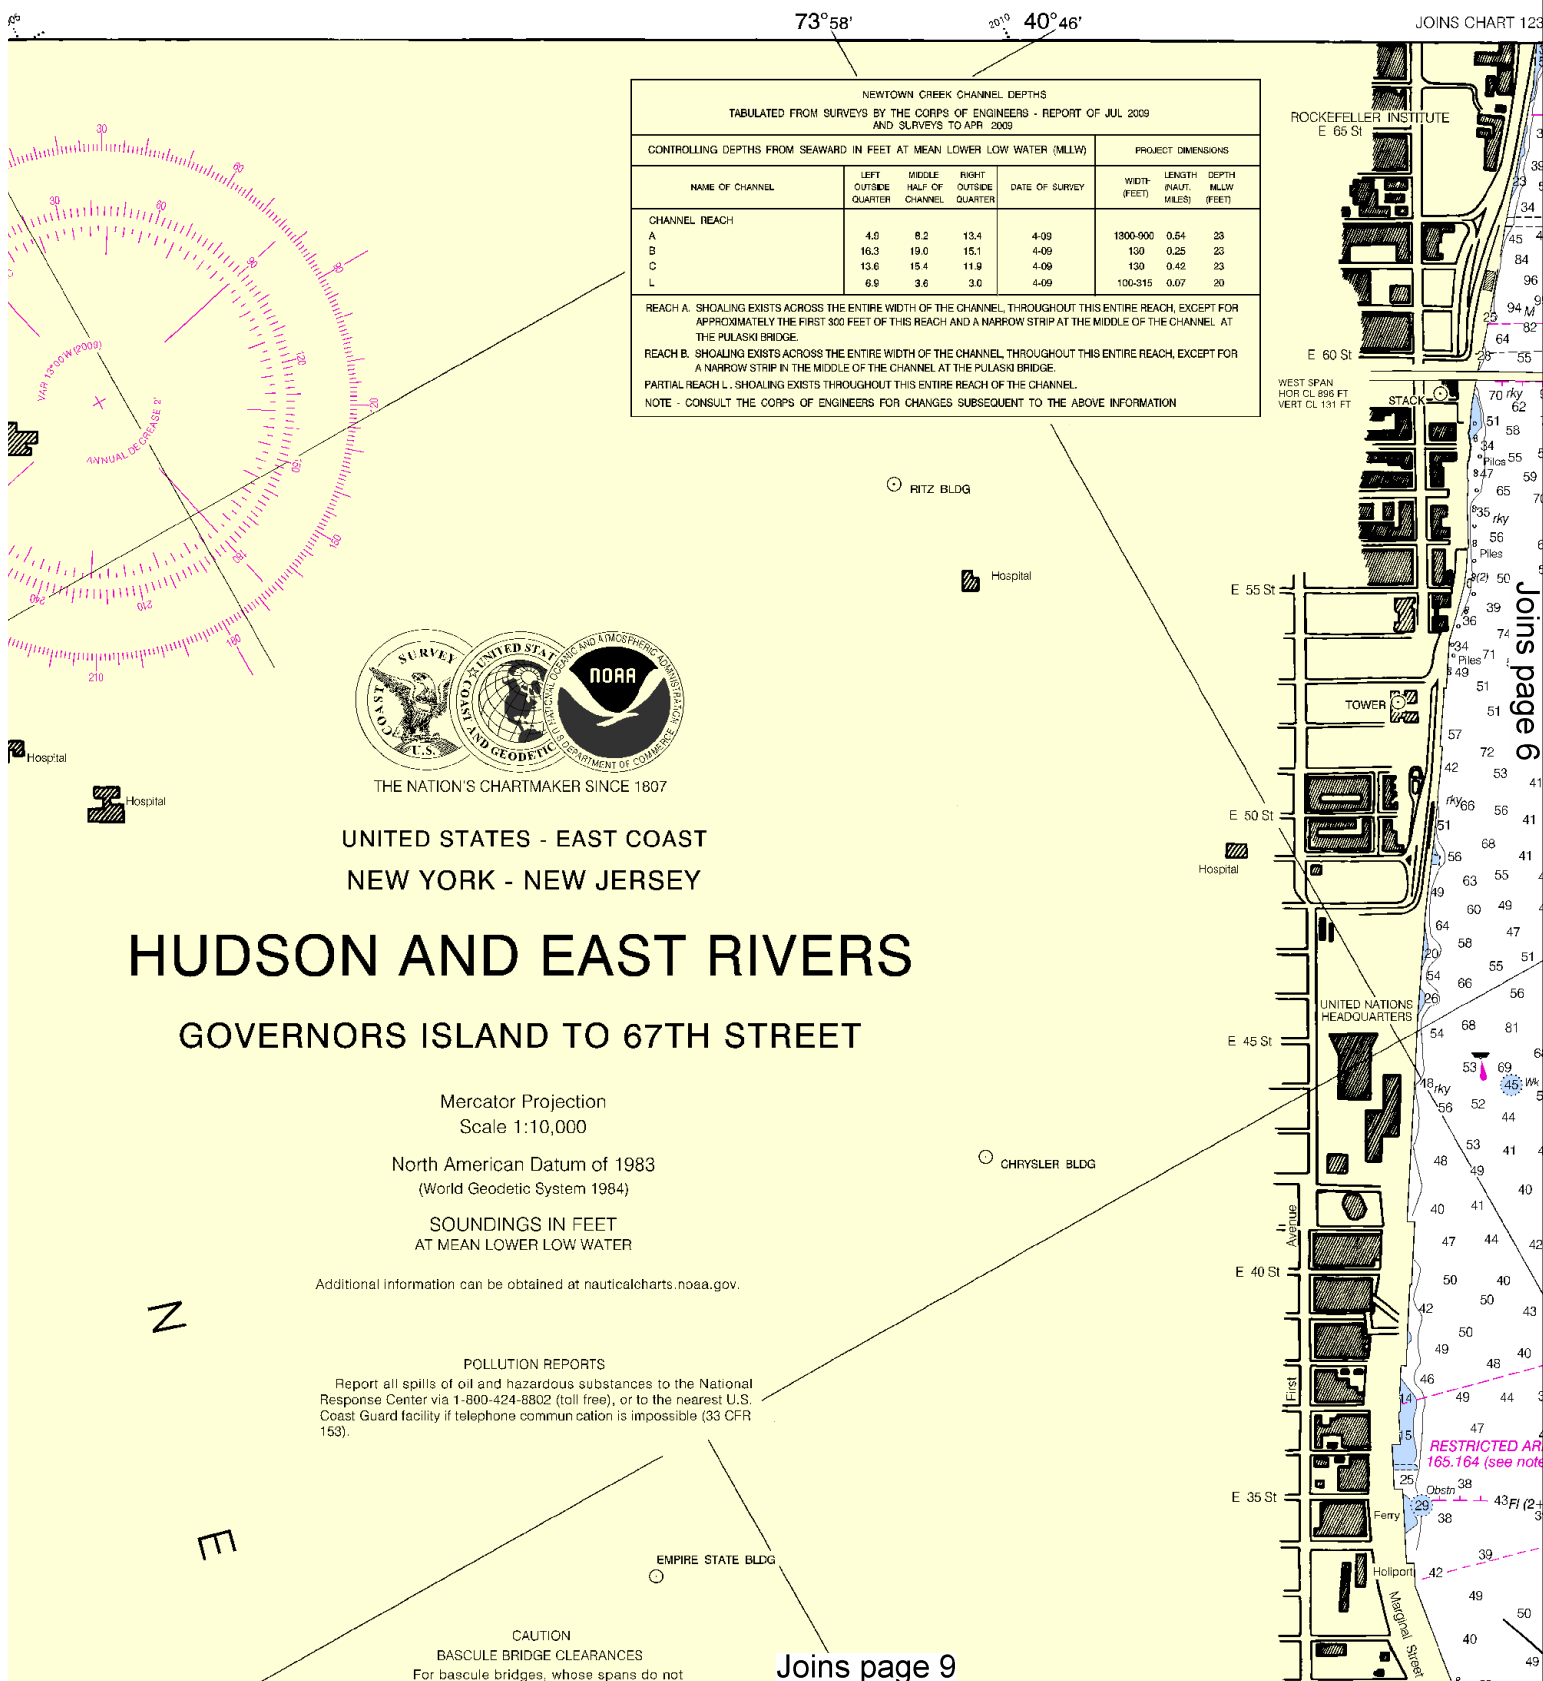

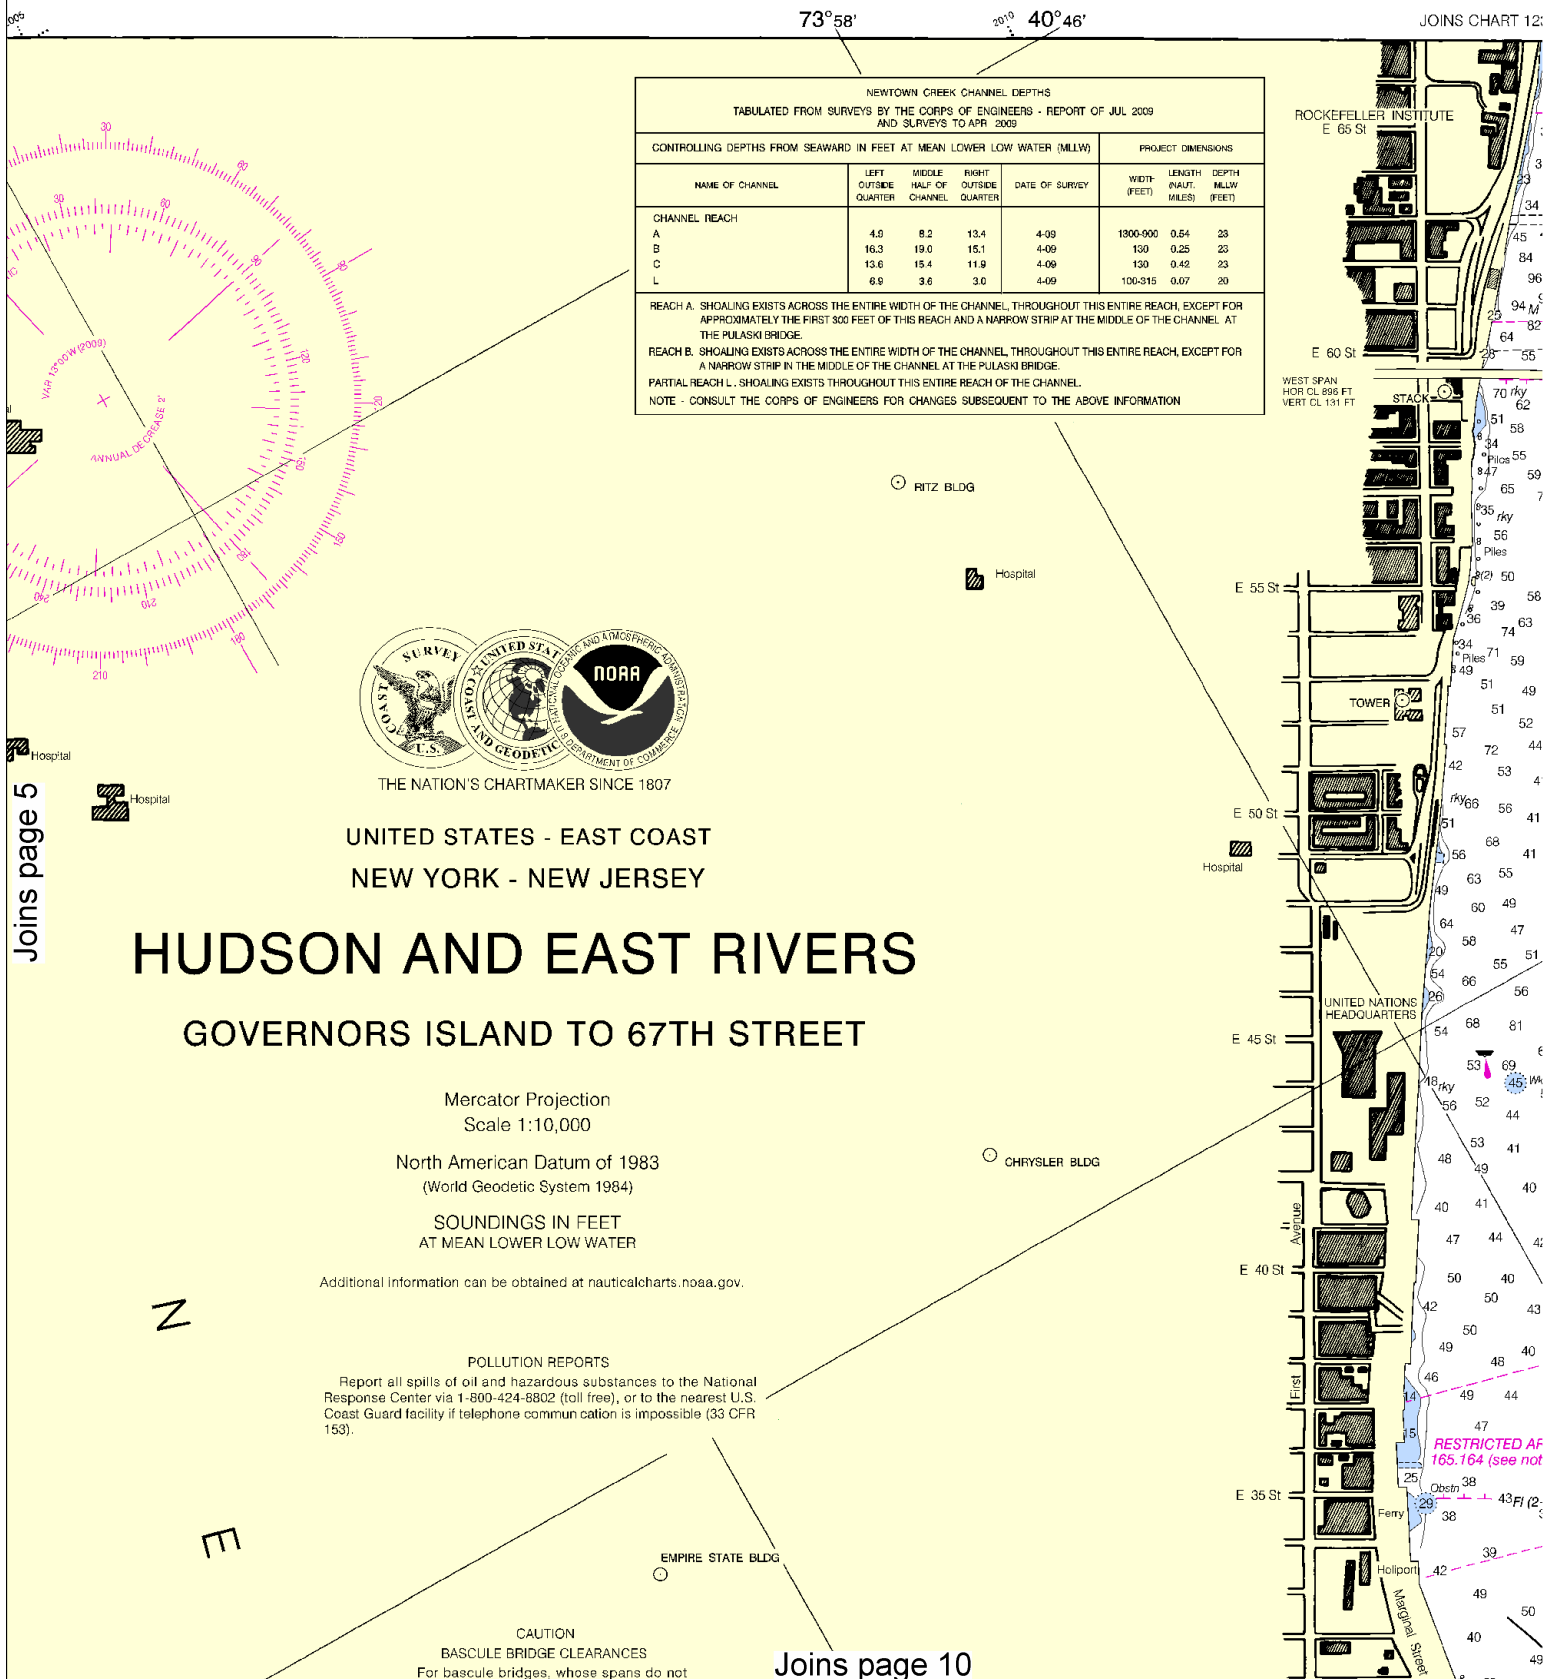

6



Printed at reduced scale.


SCALE 1:10,000

See Note on page 5.



NOAA and its partner, OceanGrafix, offer this chart updated weekly by NOAA for Notices to Mariners and critical corrections. Charts are printed when ordered using Print-on-Demand technology. New Editions are available 5-8 weeks before their release as traditional NOAA charts. Ask your chart agent about Print-on-Demand charts or contact NOAA at 1-800-584-4683, <http://NauticalCharts.gov>, [help@NauticalCharts.gov](mailto:help@NauticalCharts.gov), or OceanGrafix at 1-877-56CHART, <http://OceanGrafix.com>, or [help@OceanGrafix.com](mailto:help@OceanGrafix.com).

# SOUNDINGS IN FEET

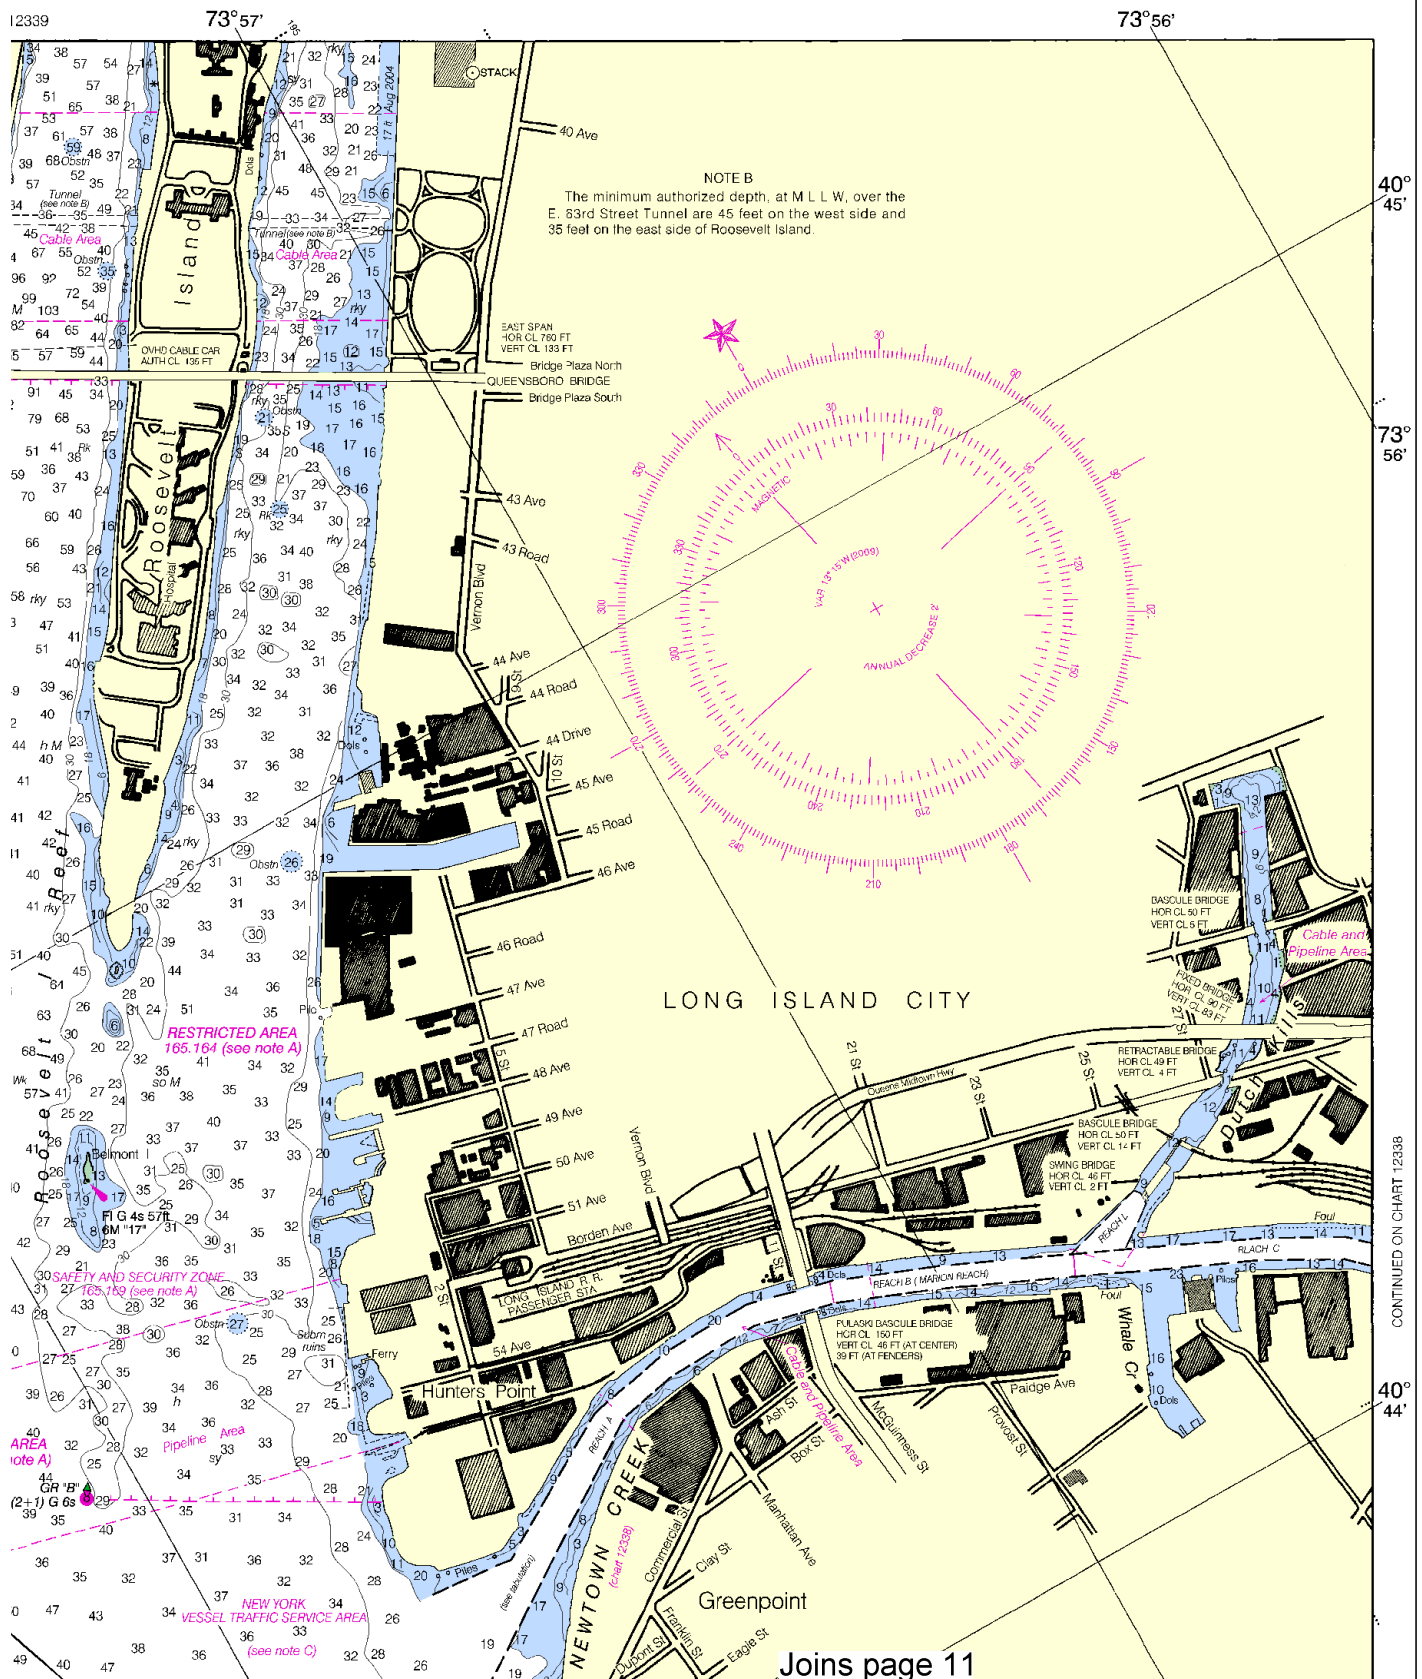

12335

CONTINUED ON CHART 12338

Joins page 11

This BookletChart has been updated with: Coast Guard Local Notice To Mariners: 0710 2/16/2010,  
 NGA Weekly Notice to Mariners: 0910 2/27/2010,  
 Canadian Coast Guard Notice to Mariners: 1209 12/25/2009.



Joins page 4

NO-DISCHARGE ZONE  
(see note Z)

Joins page 12

8



Printed at reduced scale.


SCALE 1:10,000

See Note on page 5.

Nautical Miles

Yards


200 0 200 400 600 800 1000 1200

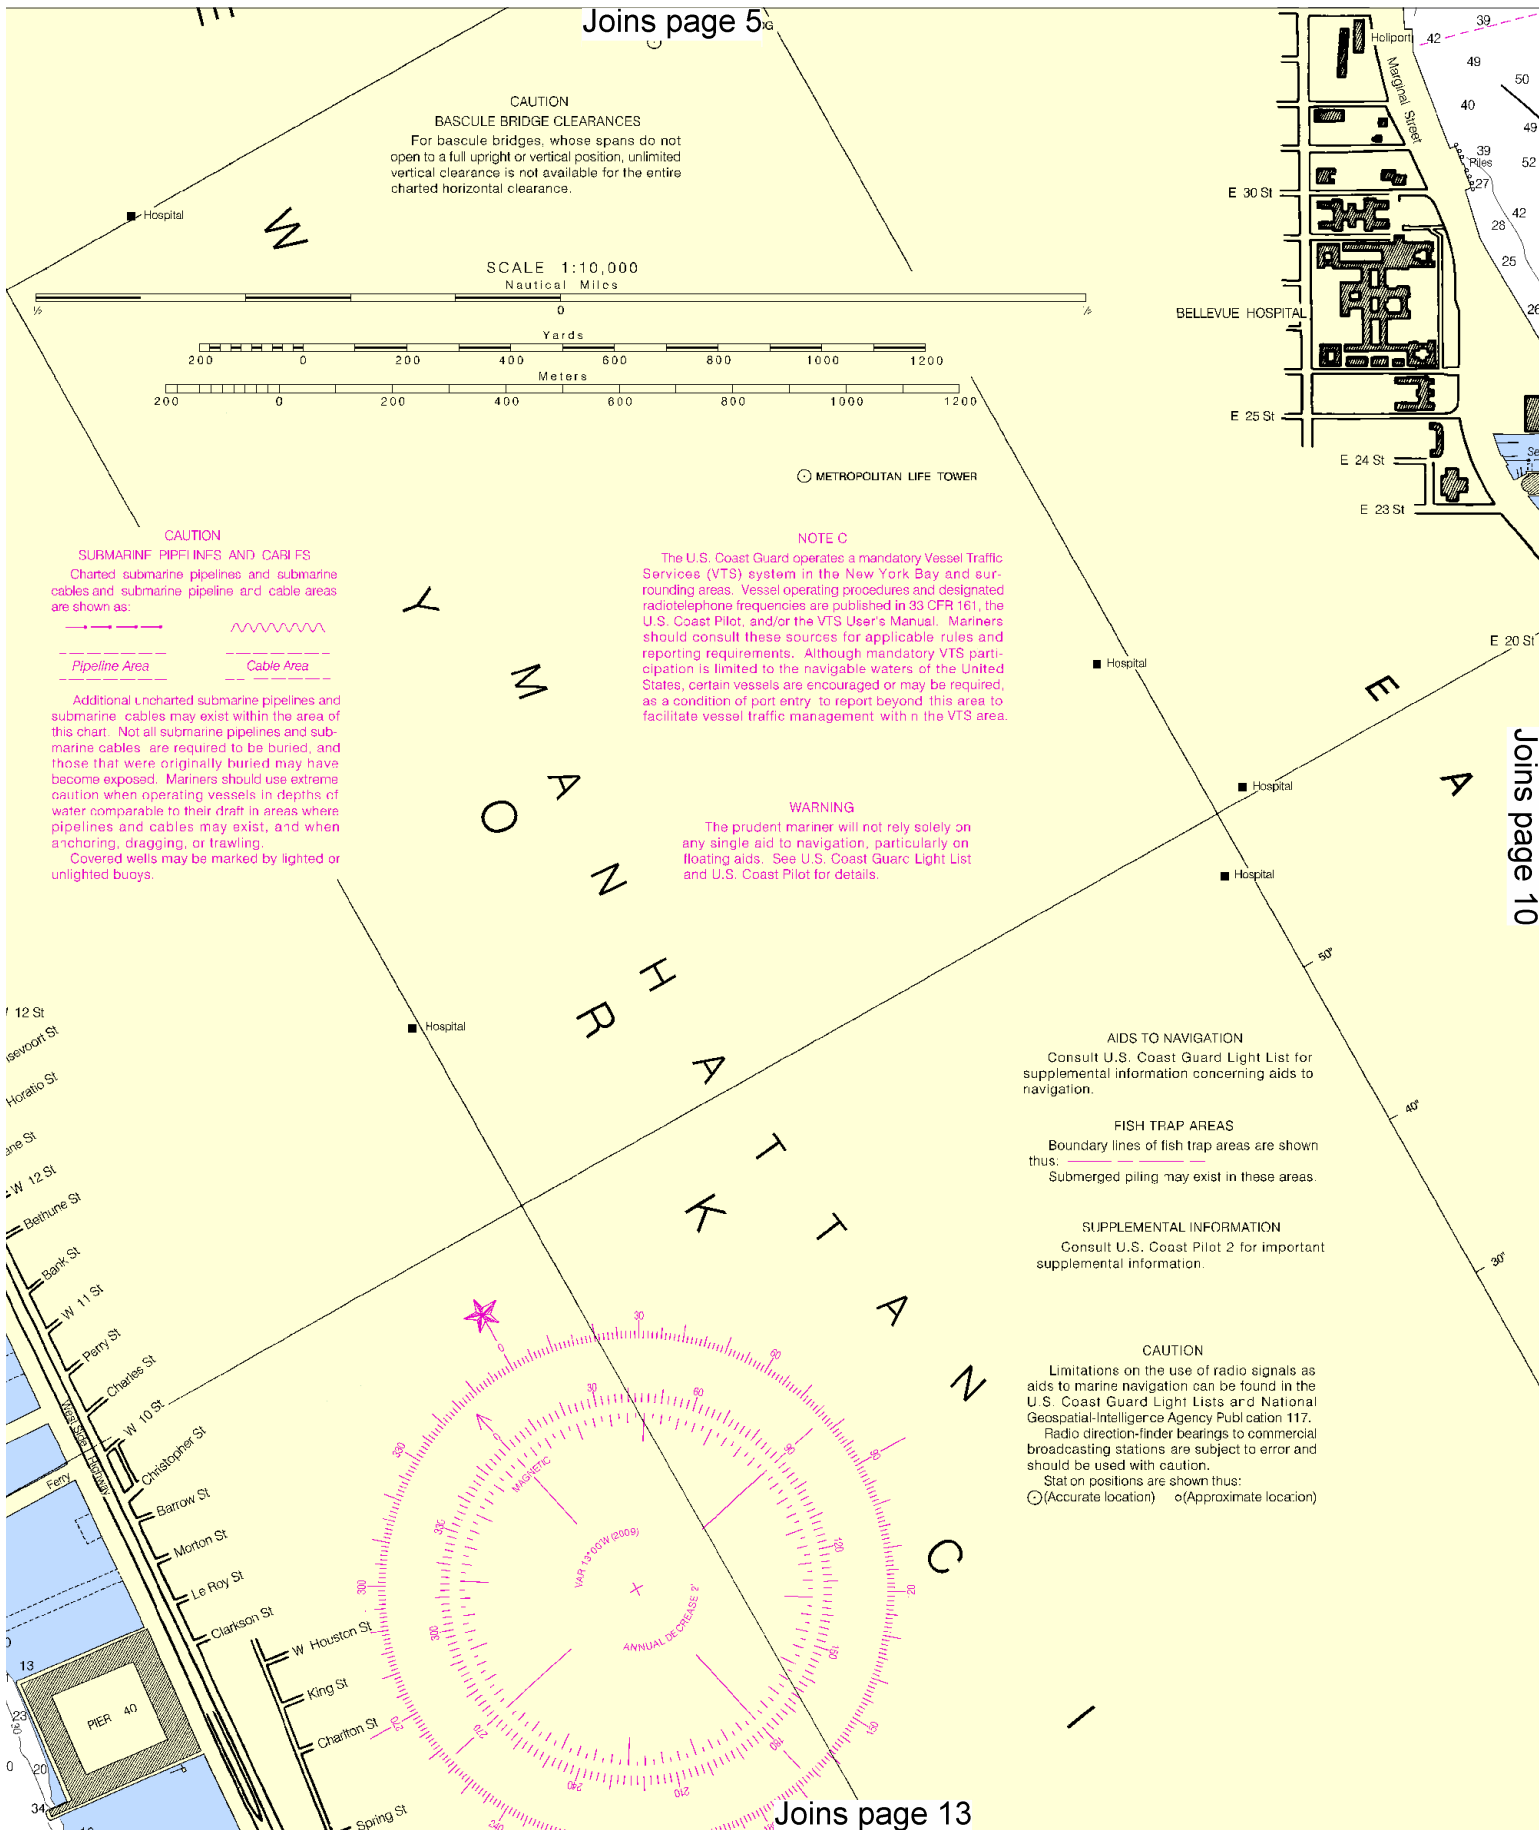

Joins page 6

**CAUTION**  
**BASCULE BRIDGE CLEARANCES**  
For bascule bridges, whose spans do not open to a full upright or vertical position, unlimited vertical clearance is not available for the entire charted horizontal clearance.

SCALE 1:10,000  
Nautical Miles



METROPOLITAN LIFE TOWER

**CAUTION**  
**SUBMARINE PIPELINES AND CABLES**  
Charted submarine pipelines and submarine cables and submarine pipeline and cable areas are shown as:

Pipeline Area  
Cable Area

Additional uncharted submarine pipelines and submarine cables may exist within the area of this chart. Not all submarine pipelines and submarine cables are required to be buried, and those that were originally buried may have become exposed. Mariners should use extreme caution when operating vessels in depths of water comparable to their draft in areas where pipelines and cables may exist, and when anchoring, dragging, or trawling. Covered wells may be marked by lighted or unlighted buoys.

**NOTE C**  
The U.S. Coast Guard operates a mandatory Vessel Traffic Services (VTS) system in the New York Bay and surrounding areas. Vessel operating procedures and designated radiotelephone frequencies are published in 33 CFR 161, the U.S. Coast Pilot, and/or the VTS User's Manual. Mariners should consult these sources for applicable rules and reporting requirements. Although mandatory VTS participation is limited to the navigable waters of the United States, certain vessels are encouraged or may be required, as a condition of port entry to report beyond this area to facilitate vessel traffic management within the VTS area.

**WARNING**  
The prudent mariner will not rely solely on any single aid to navigation, particularly on floating aids. See U.S. Coast Guard Light List and U.S. Coast Pilot for details.


**AIDS TO NAVIGATION**  
Consult U.S. Coast Guard Light List for supplemental information concerning aids to navigation.

**FISH TRAP AREAS**  
Boundary lines of fish trap areas are shown thus:  
Submerged piling may exist in these areas.

**SUPPLEMENTAL INFORMATION**  
Consult U.S. Coast Pilot 2 for important supplemental information.

**CAUTION**  
Limitations on the use of radio signals as aids to marine navigation can be found in the U.S. Coast Guard Light Lists and National Geospatial-Intelligence Agency Publication 117. Radio direction-finder bearings to commercial broadcasting stations are subject to error and should be used with caution. Station positions are shown thus:  
○ (Accurate location) ○ (Approximate location)

Joins page 9

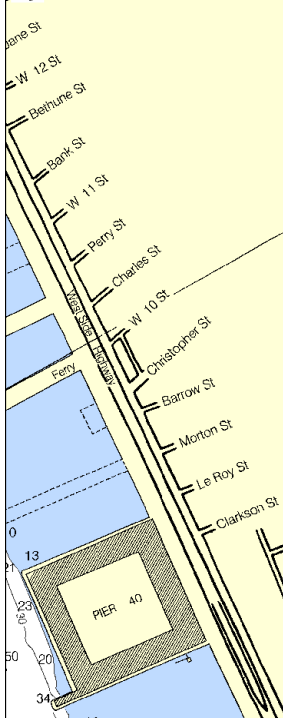

Joins page 14

10




Printed at reduced scale.


SCALE 1:10,000  
Nautical Miles

See Note on page 5.



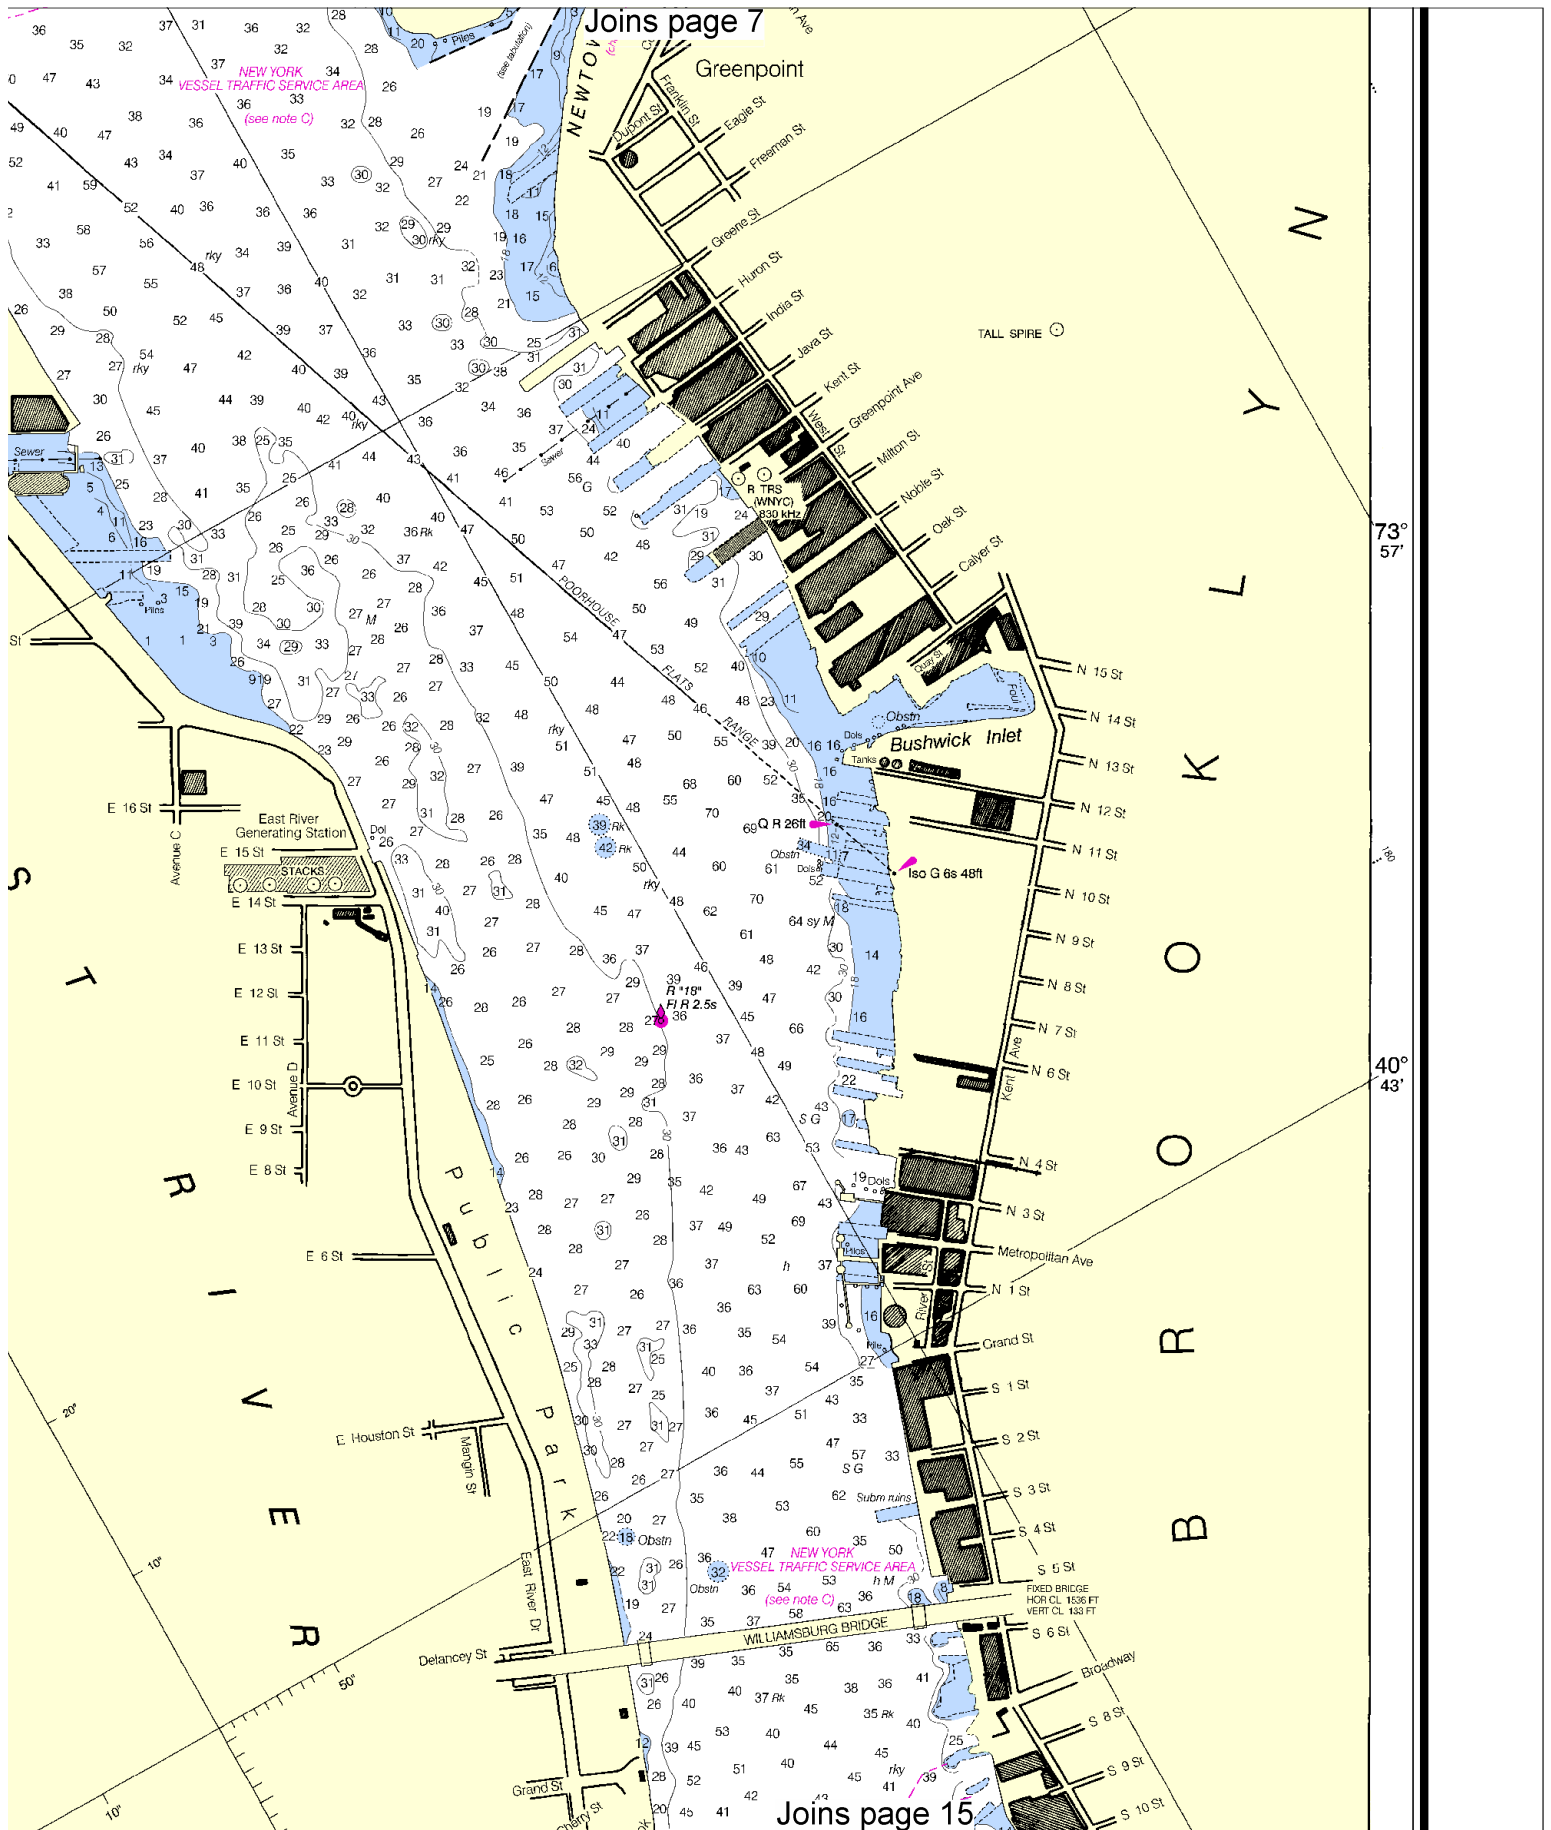

Joins page 8


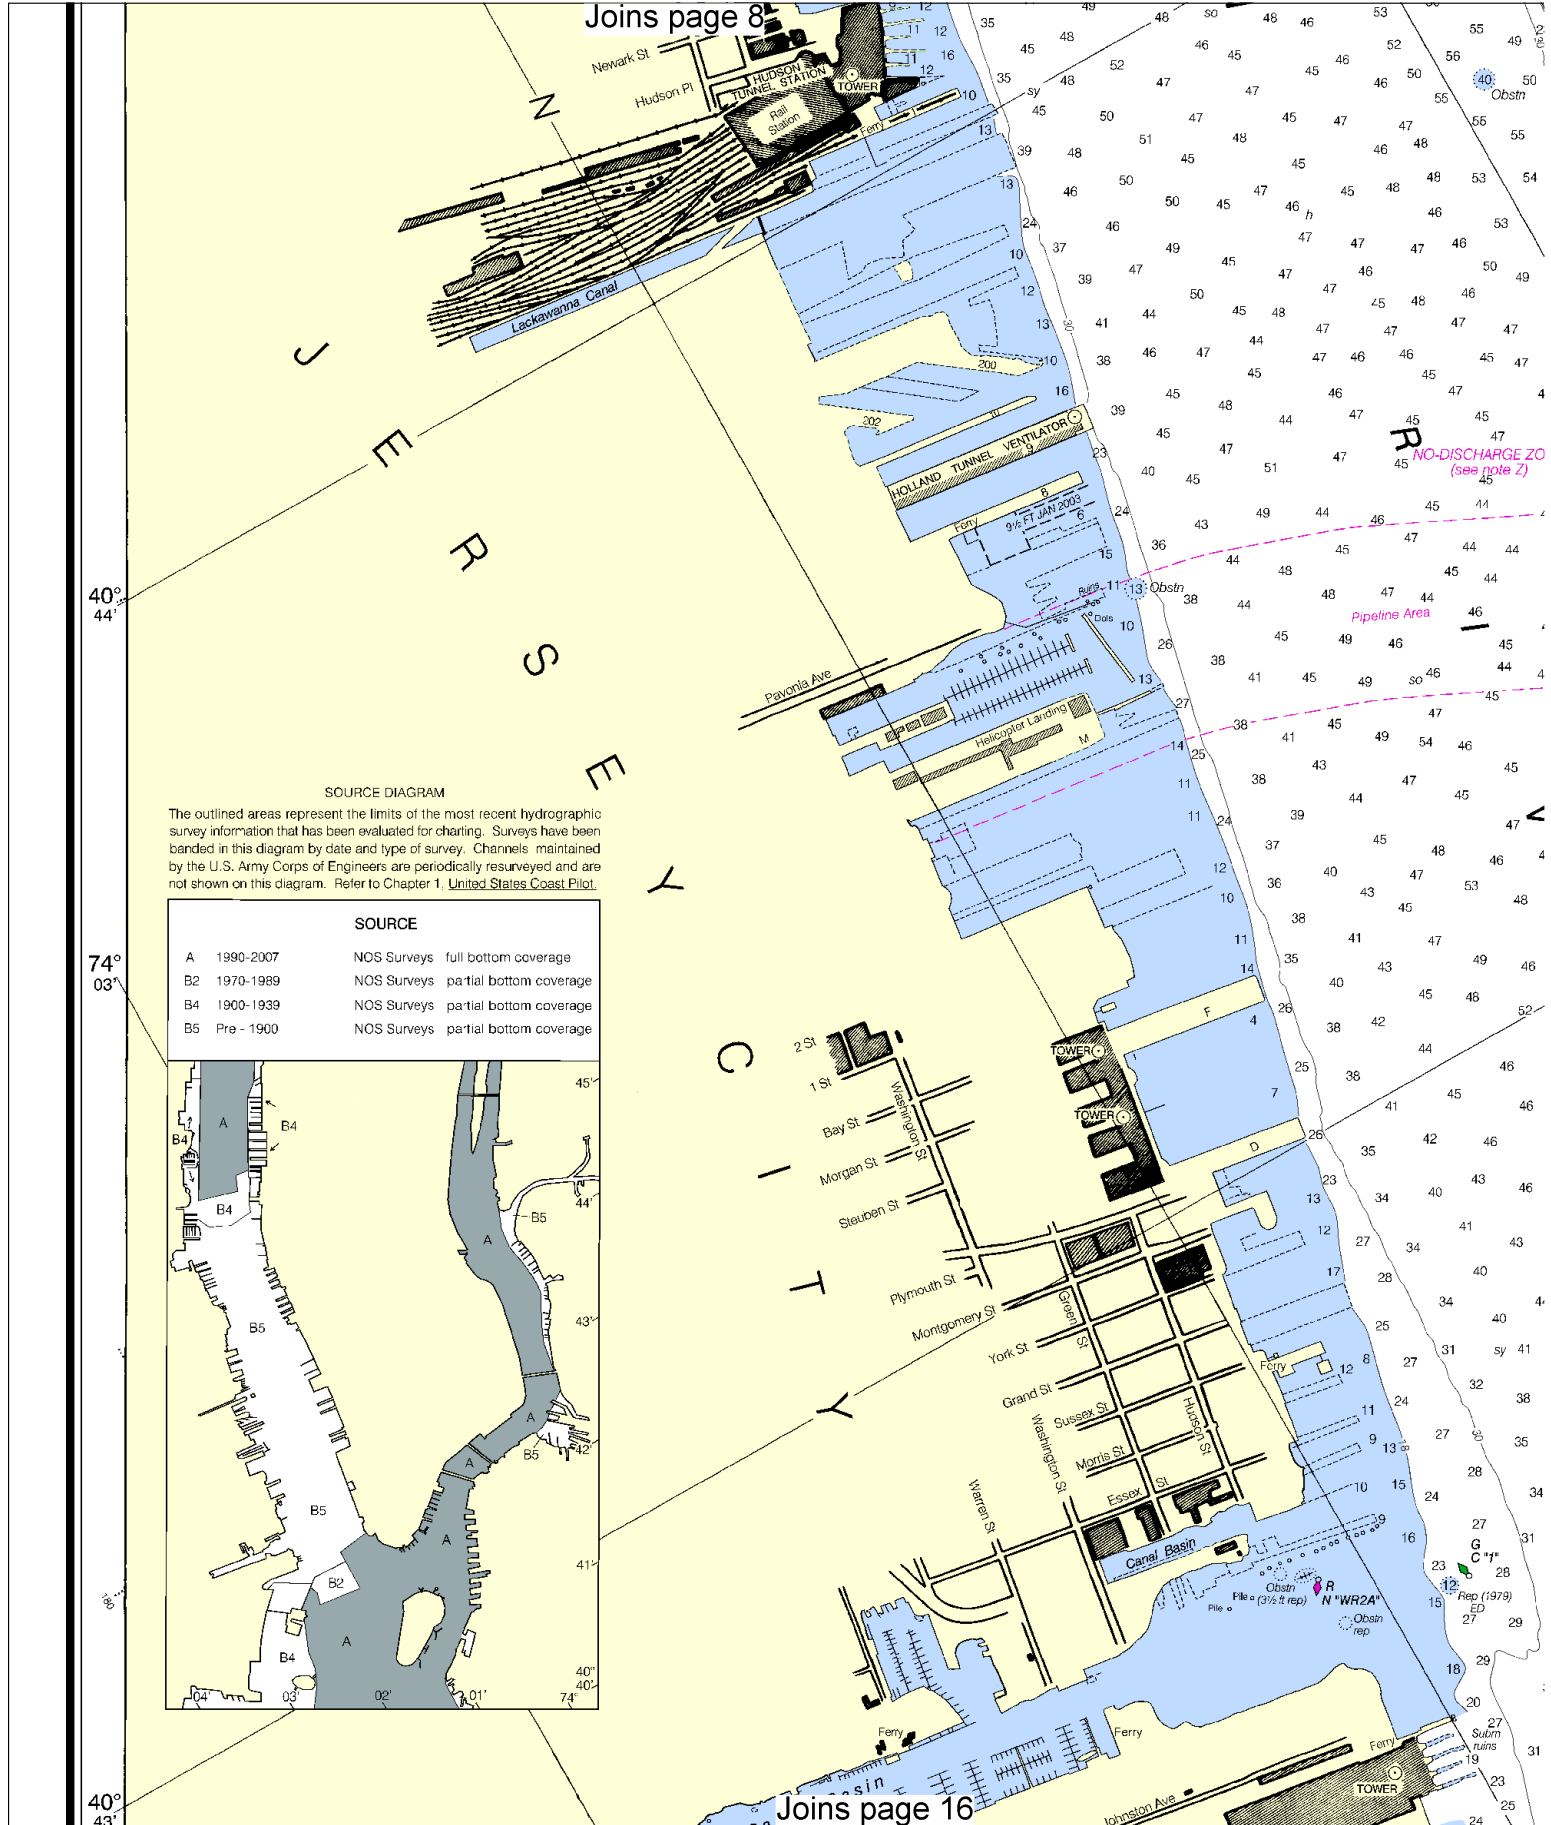



SOURCE DIAGRAM


The outlined areas represent the limits of the most recent hydrographic survey information that has been evaluated for charting. Surveys have been banded in this diagram by date and type of survey. Channels maintained by the U.S. Army Corps of Engineers are periodically resurveyed and are not shown on this diagram. Refer to Chapter 1, United States Coast Pilot.

SOURCE


A	1990-2007	NOS Surveys	full bottom coverage
B2	1970-1989	NOS Surveys	partial bottom coverage
B4	1900-1939	NOS Surveys	partial bottom coverage
B5	Pre - 1900	NOS Surveys	partial bottom coverage

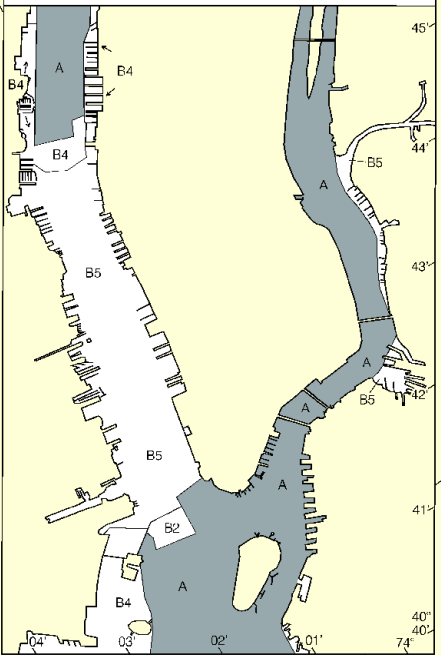

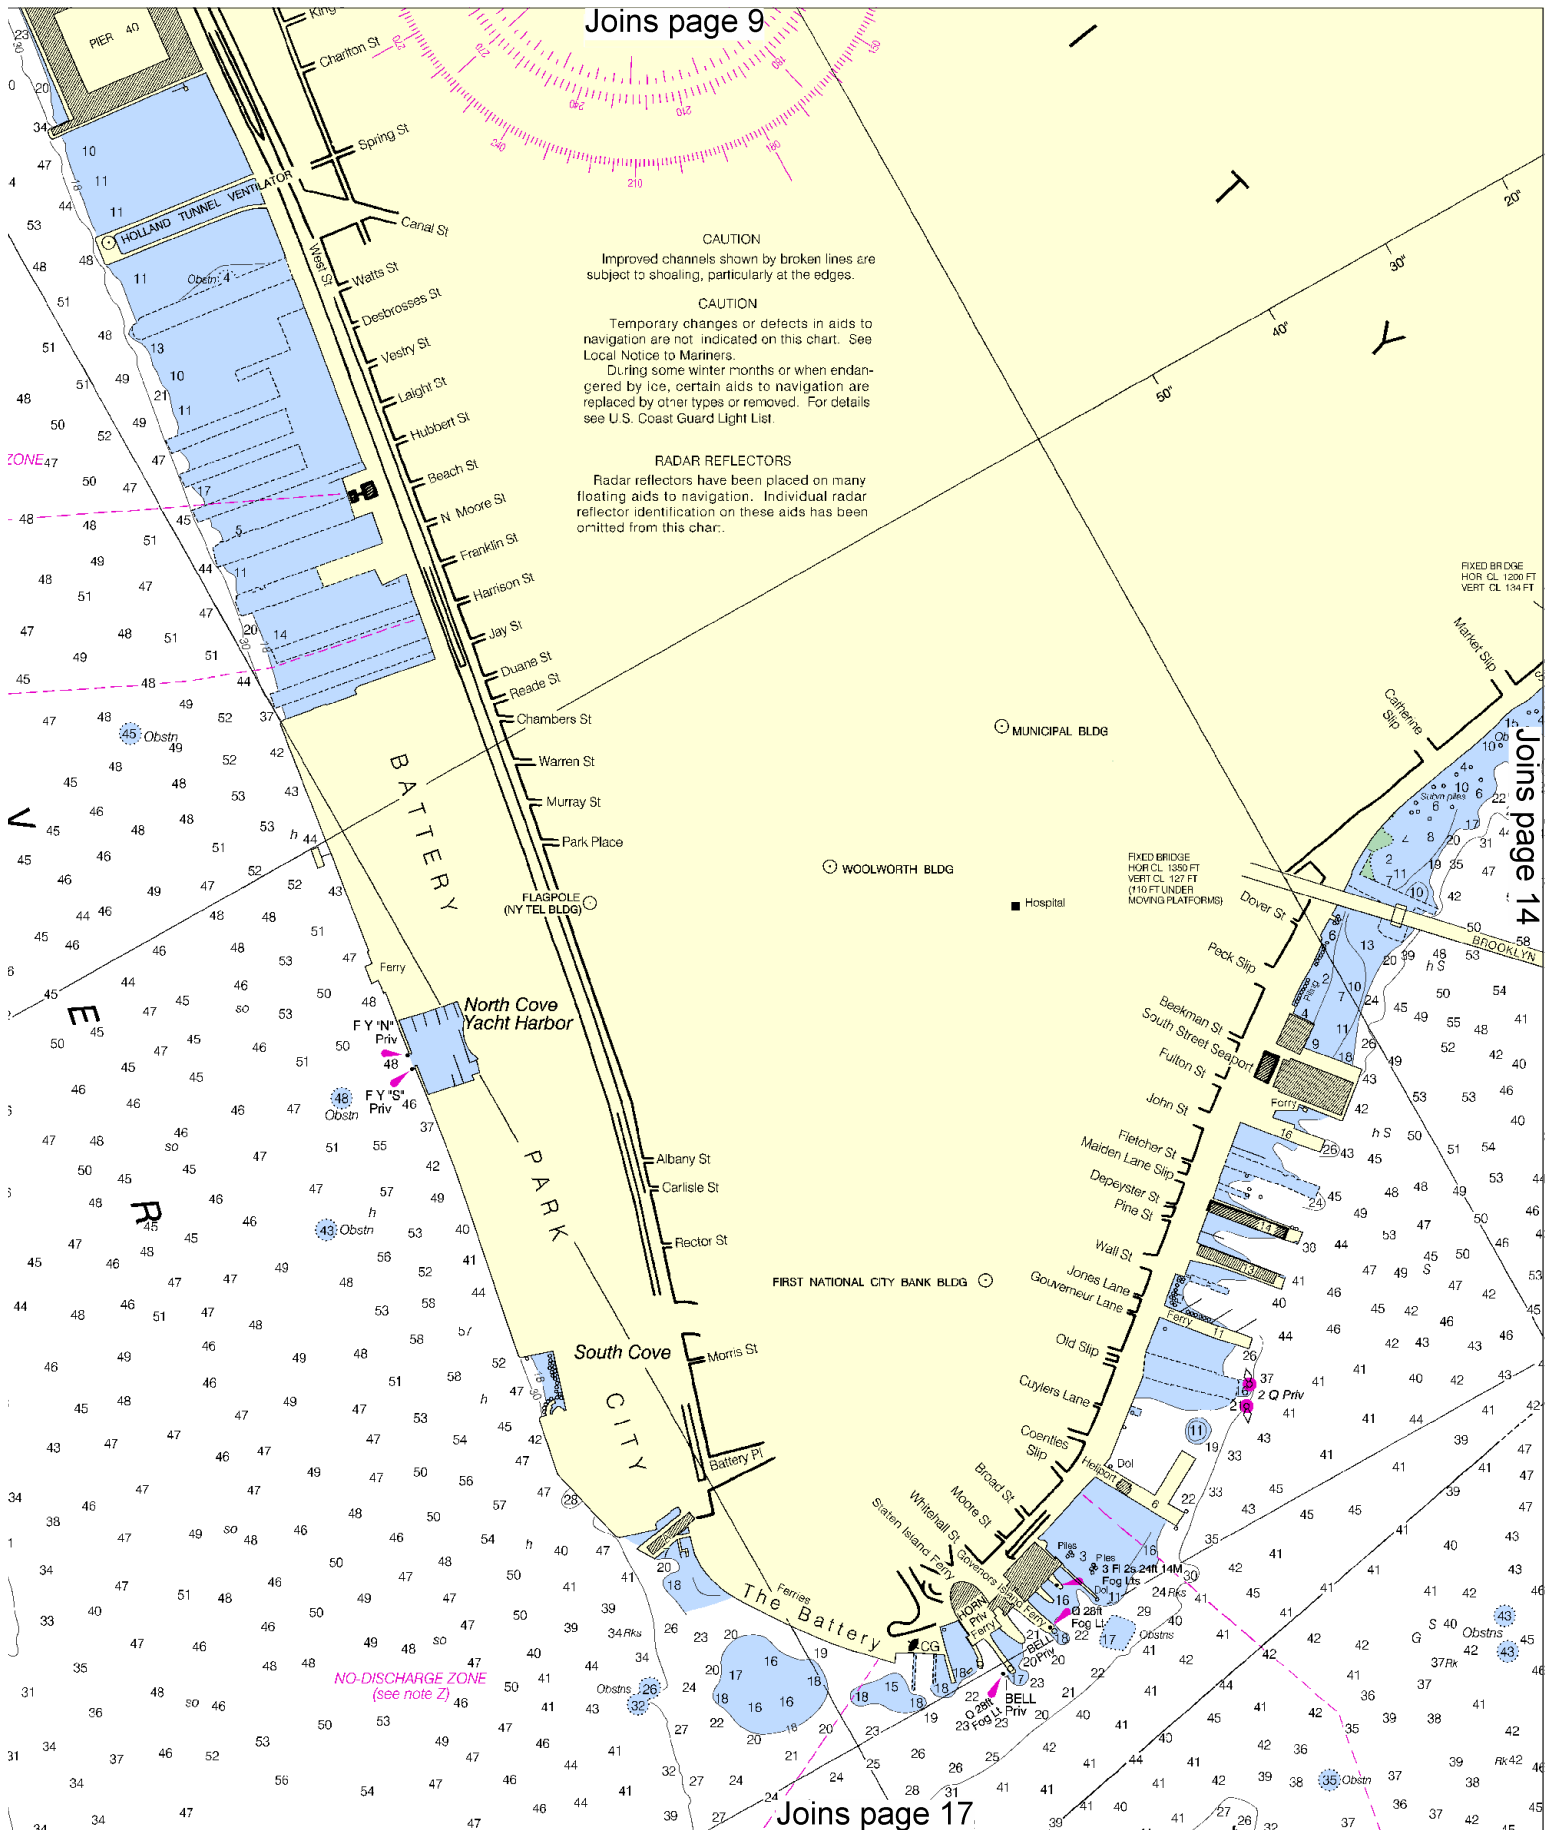

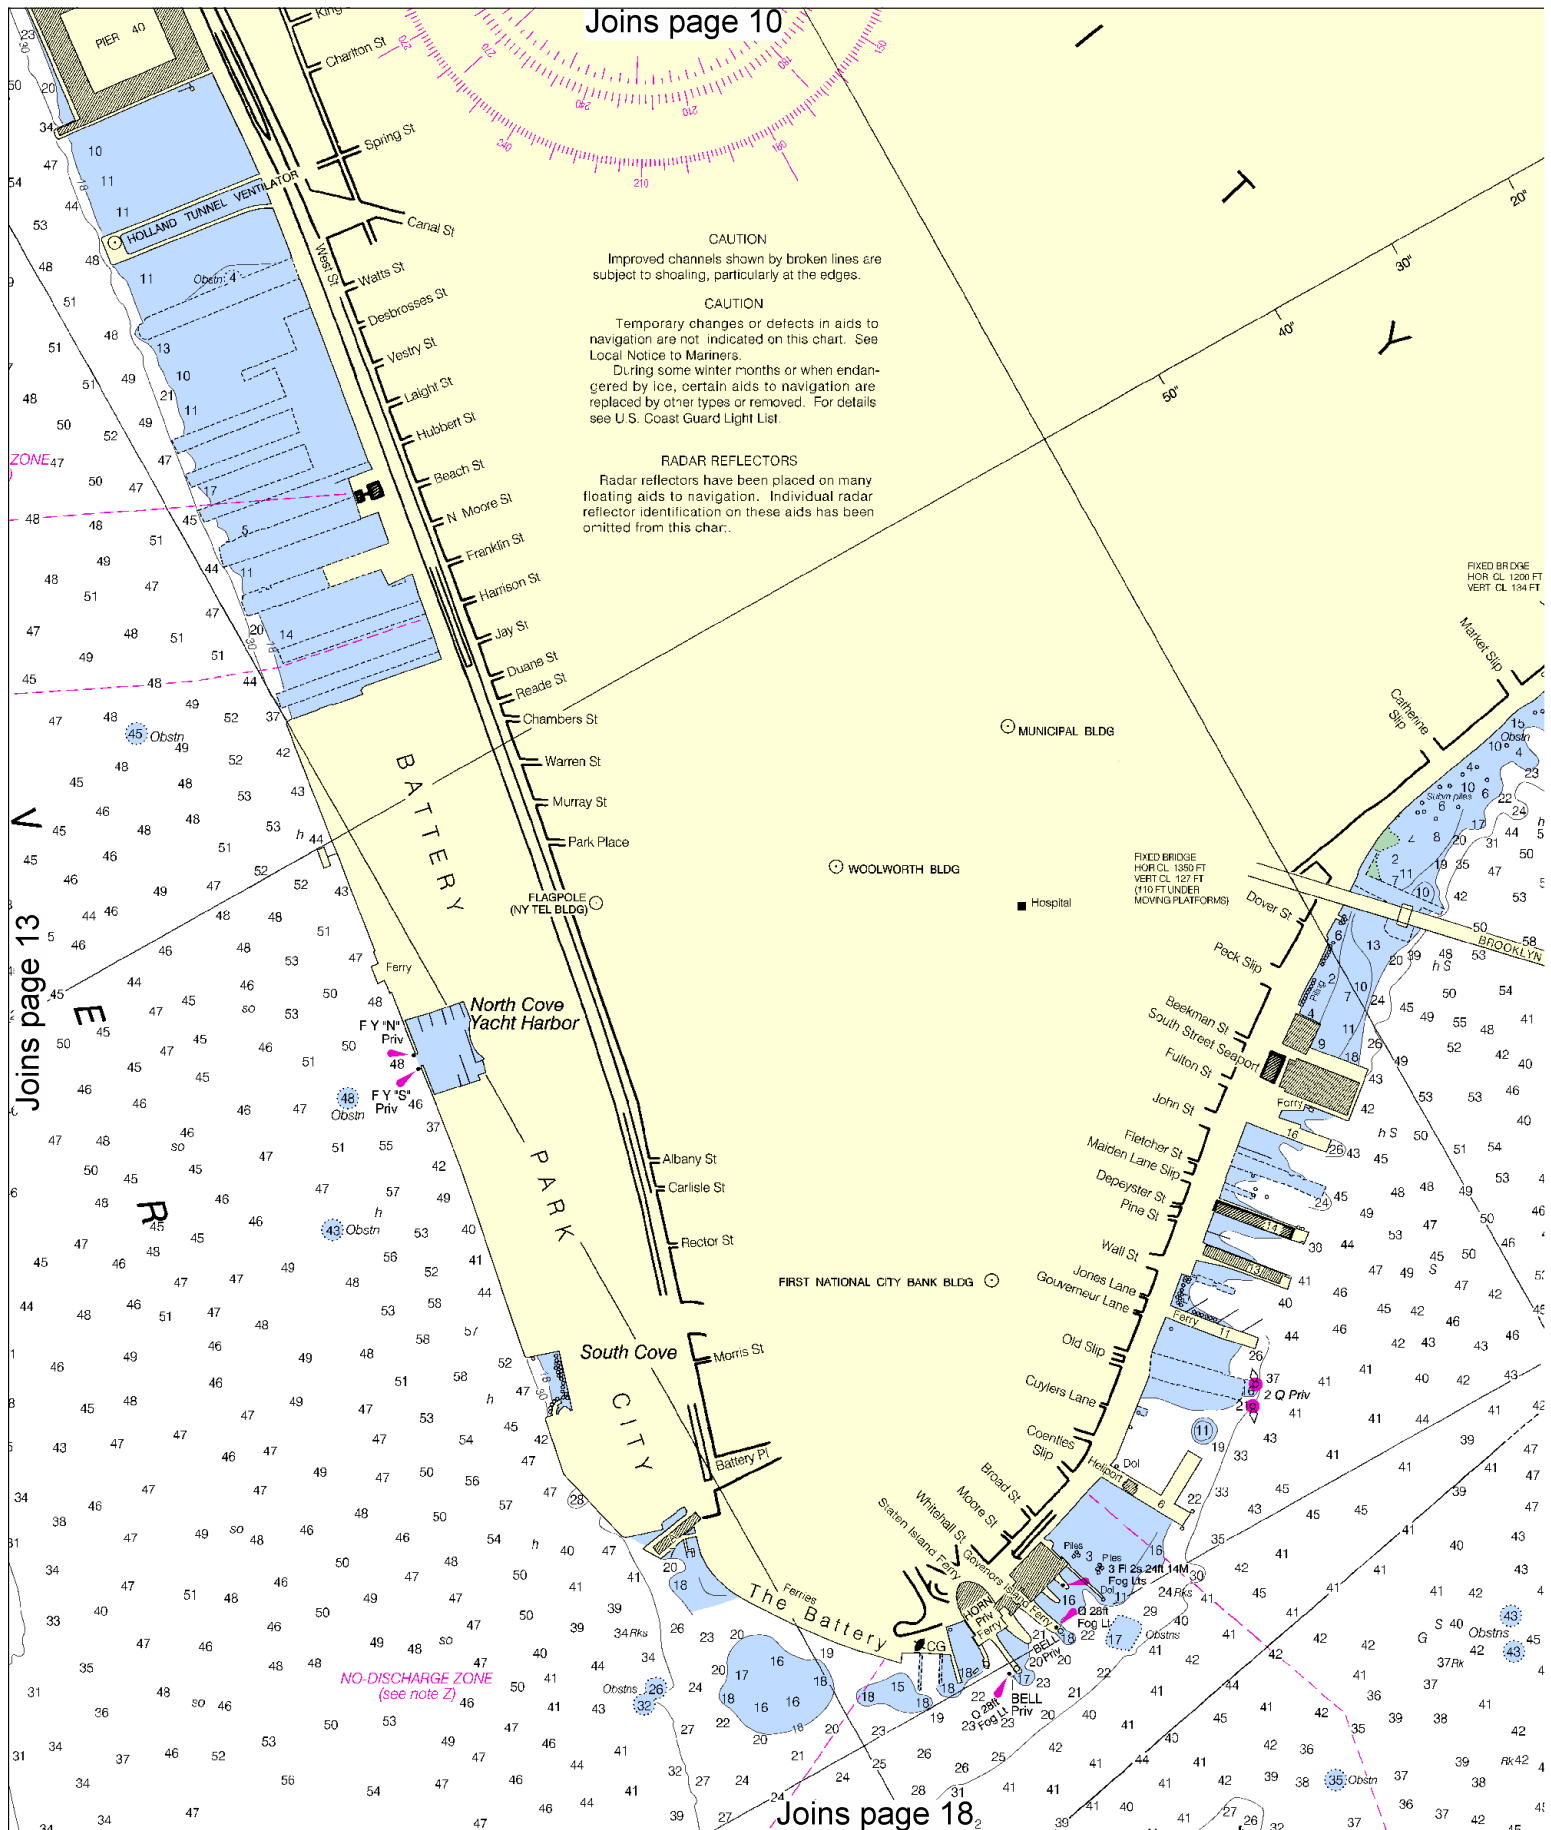

Joins page 11\*

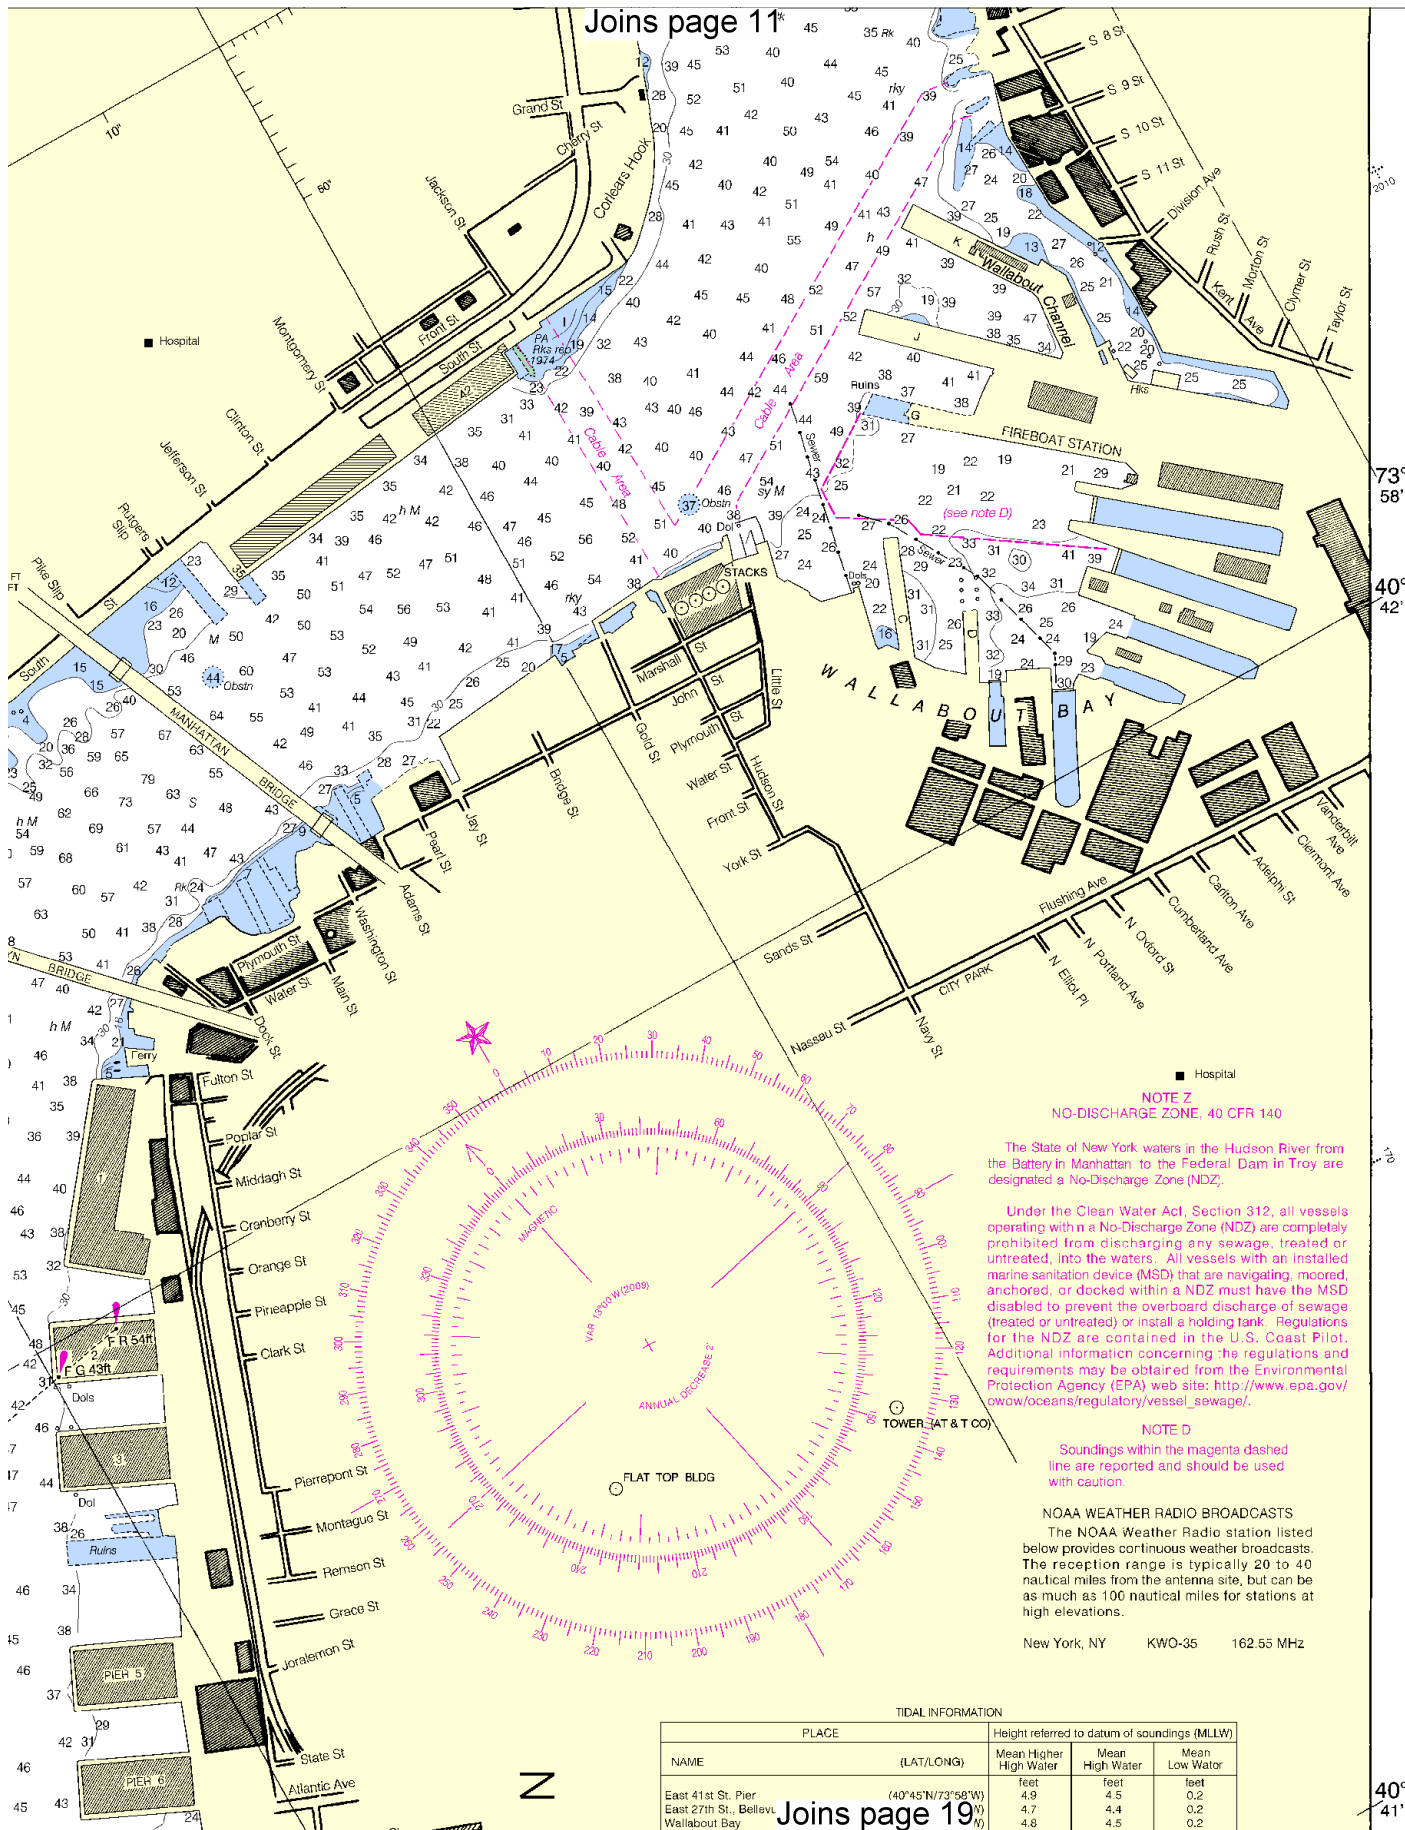

NOTE Z  
NO-DISCHARGE ZONE, 40 CFR 140

The State of New York waters in the Hudson River from the Battery in Manhattan to the Federal Dam in Troy are designated as a No-Discharge Zone (NDZ).

Under the Clean Water Act, Section 312, all vessels operating within a No-Discharge Zone (NDZ) are completely prohibited from discharging any sewage, treated or untreated, into the waters. All vessels with an installed marine sanitation device (MSD) that are navigating, moored, anchored, or docked within a NDZ must have the MSD disabled to prevent the overboard discharge of sewage (treated or untreated) or install a holding tank. Regulations for the NDZ are contained in the U.S. Coast Pilot. Additional information concerning the regulations and requirements may be obtained from the Environmental Protection Agency (EPA) web site: [http://www.epa.gov/owow/oceans/regulatory/vessel\\_sewage/](http://www.epa.gov/owow/oceans/regulatory/vessel_sewage/).

NOTE D  
Soundings within the magenta dashed line are reported and should be used with caution.


NOAA WEATHER RADIO BROADCASTS  
The NOAA Weather Radio station listed below provides continuous weather broadcasts. The reception range is typically 20 to 40 nautical miles from the antenna site, but can be as much as 100 nautical miles for stations at high elevations.

New York, NY KWO-35 162.55 MHz

TIDAL INFORMATION				
PLACE		Height referred to datum of soundings (MLLW)		
NAME	(LAT/LONG)	Mean Higher High Water	Mean High Water	Mean Low Water
East 41st St. Pier	(40°45'N/73°58'W)	4.9	4.5	0.2
East 27th St., Bellevu		4.7	4.4	0.2
Wallabout Bay		4.8	4.5	0.2

Joins page 19\*

40° 41'

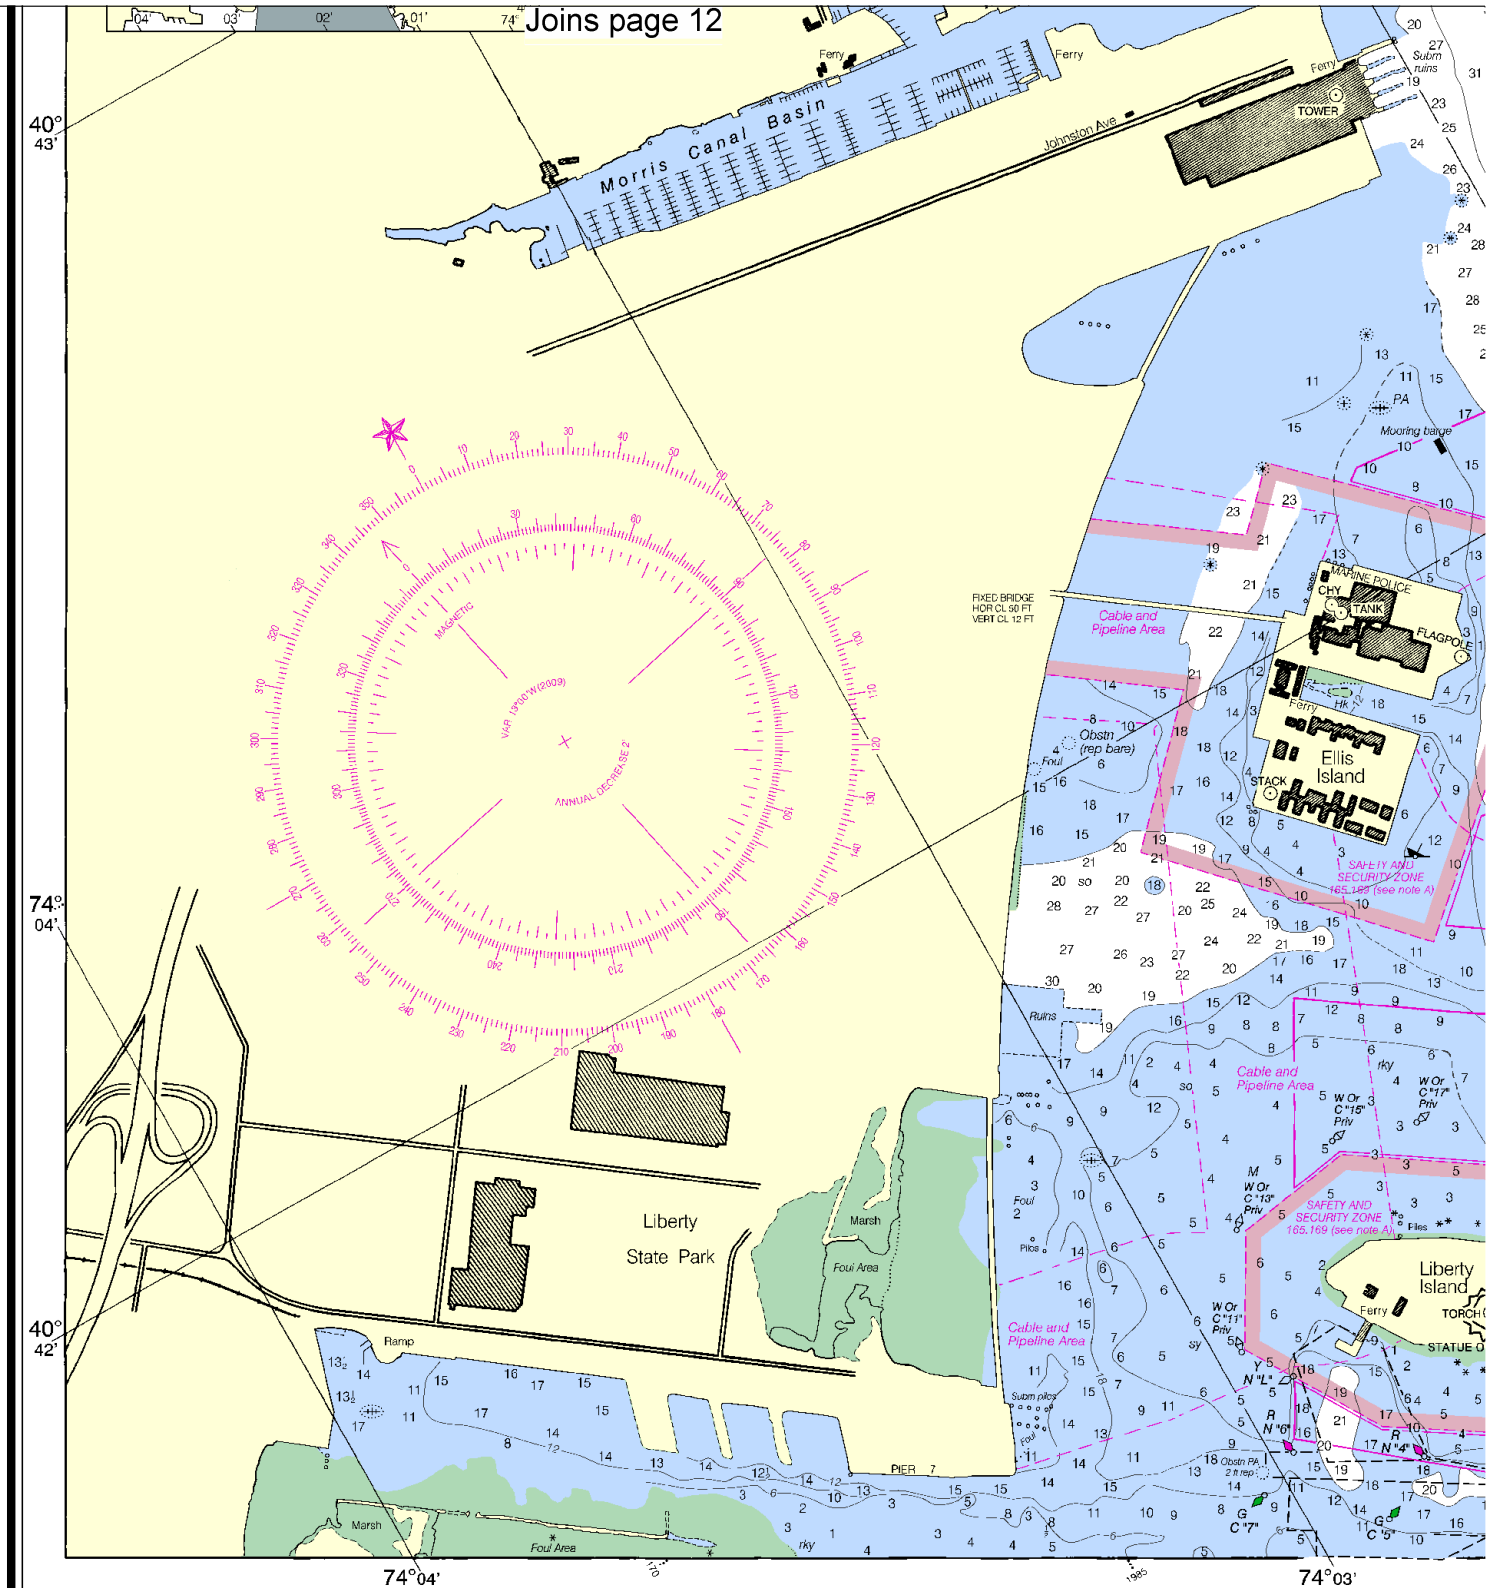

43rd Ed., Apr. / 09 ■ Corrected through NM Apr. 18/09  
 12335 Corrected through LNM Apr. 07/09

CAUTION

This chart has been corrected from the Notice to Mariners (NM) published weekly by the National Geospatial-Intelligence Agency and the Local Notice to Mariners (LNM) issued periodically by each U.S. Coast Guard district to the dates shown in the lower left hand corner. Chart updates corrected from Notice to Mariners published after the dates shown in the lower left hand corner are available at [nauticalcharts.noaa.gov](http://nauticalcharts.noaa.gov).

SOUNDINGS IN FEET

16




Printed at reduced scale.

SCALE 1:10,000


See Note on page 5.



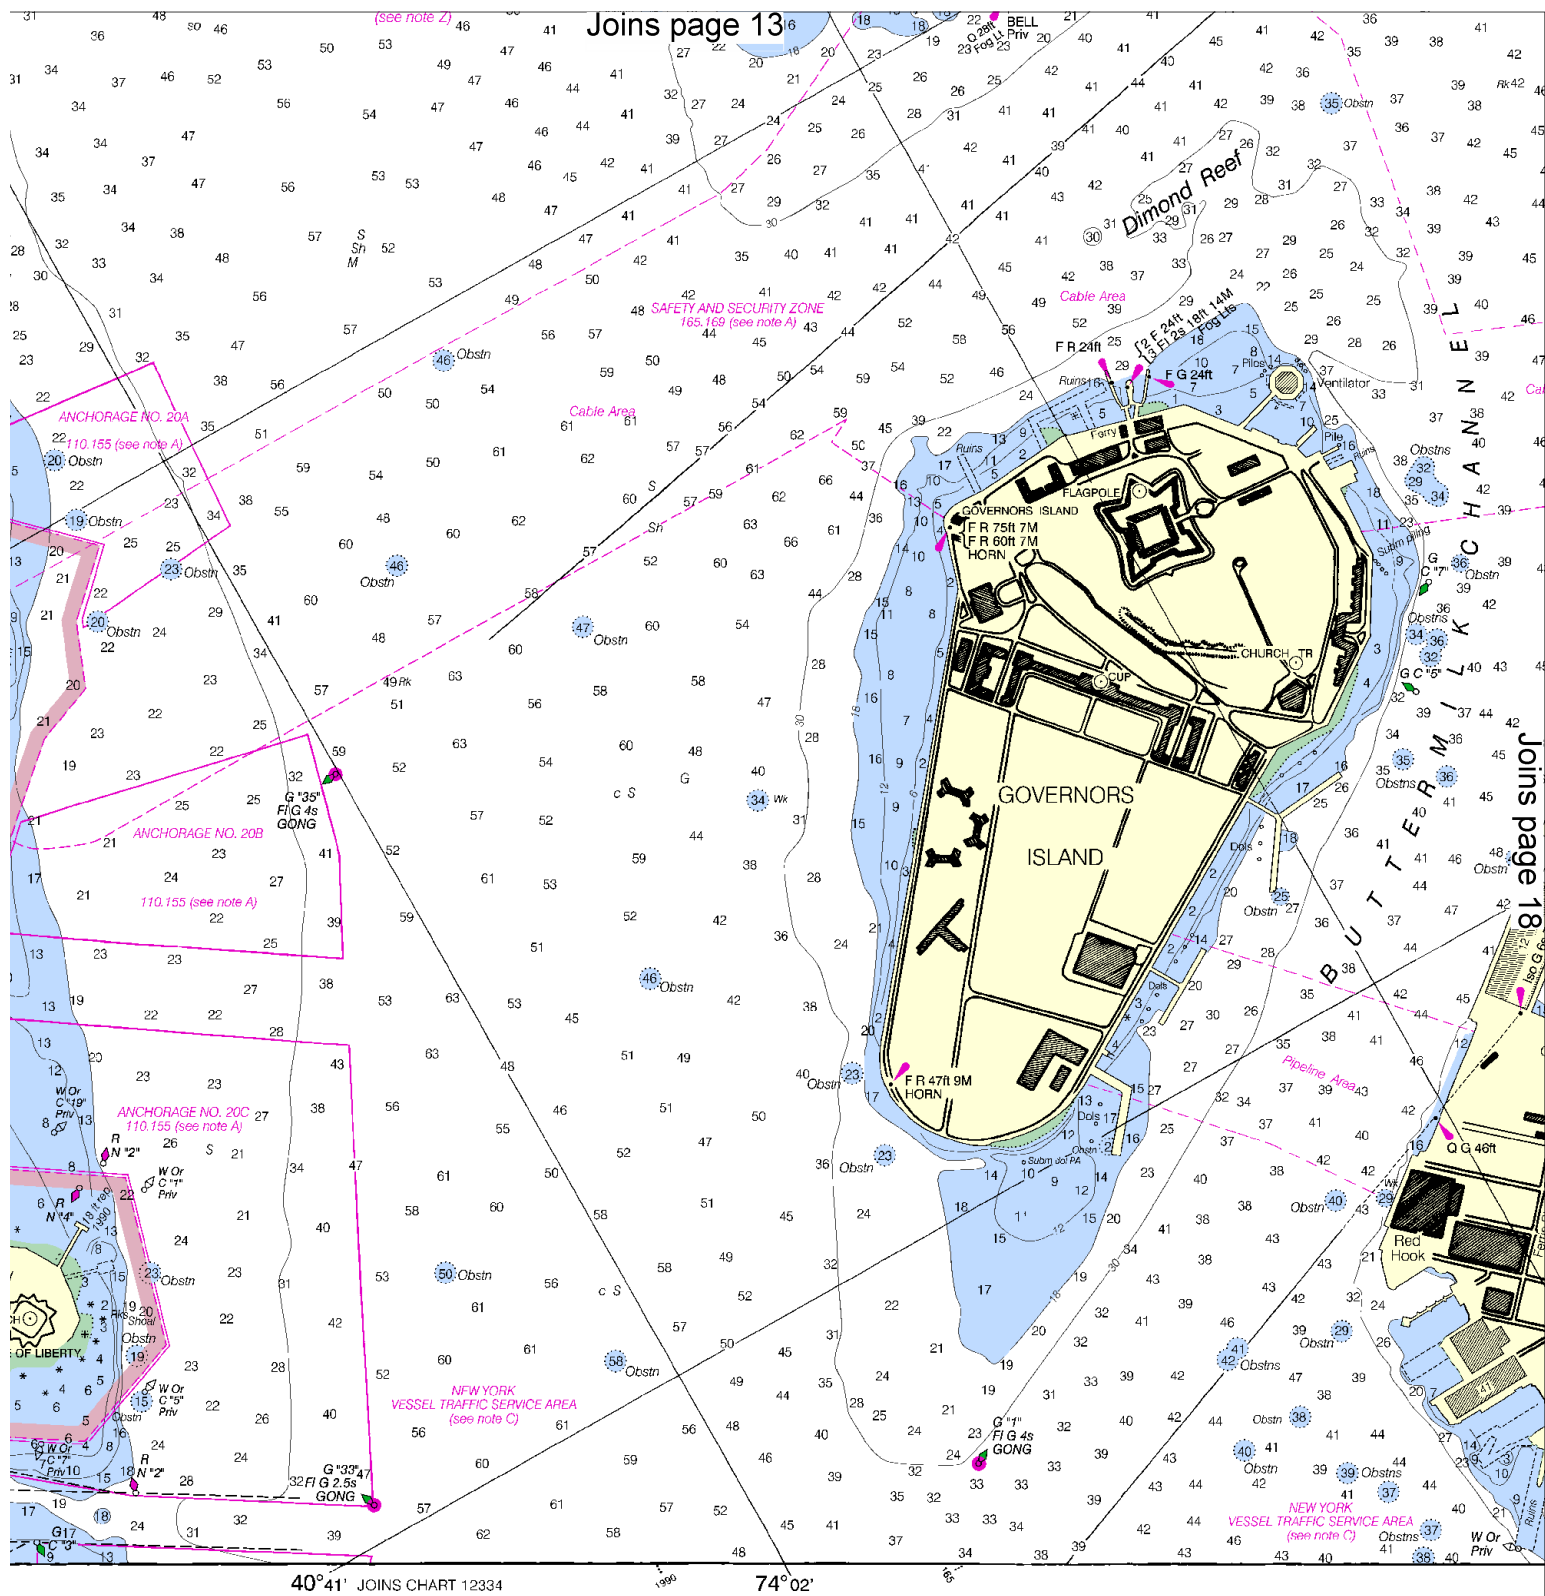

Published at Washington, D.C.  
 U.S. DEPARTMENT OF COMMERCE  
 NATIONAL OCEANIC AND ATMOSPHERIC ADMINISTRATION  
 NATIONAL OCEAN SERVICE  
 COAST SURVEY

FAT  
 F  
 ME

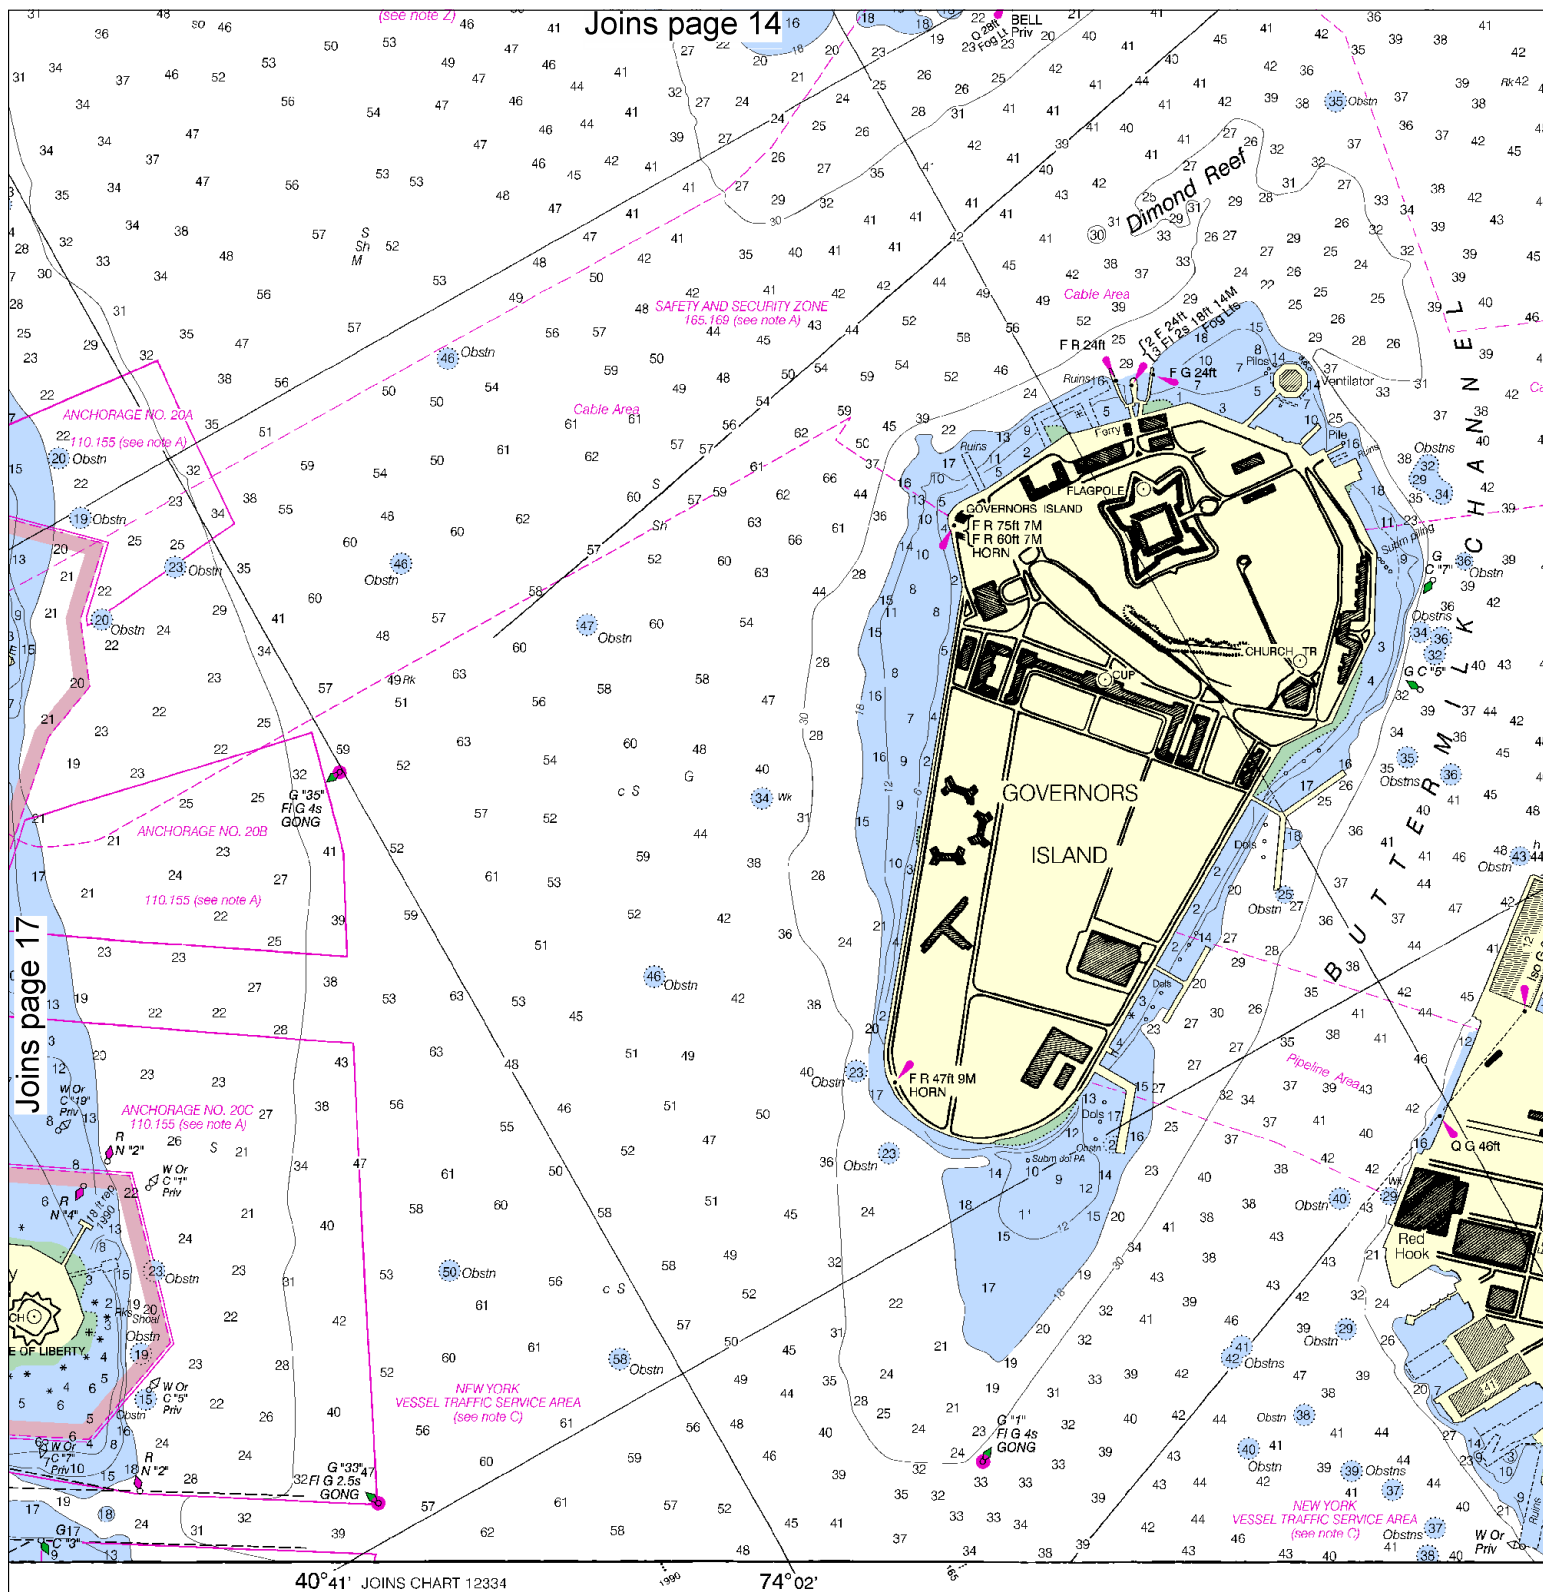

ET

Published at Washington, D.C.  
U.S. DEPARTMENT OF COMMERCE  
NATIONAL OCEANIC AND ATMOSPHERIC ADMINISTRATION  
NATIONAL OCEAN SERVICE  
COAST SURVEY

FAT  
F  
ME


18




Printed at reduced scale.

SCALE 1:10,000

See Note on page 5.



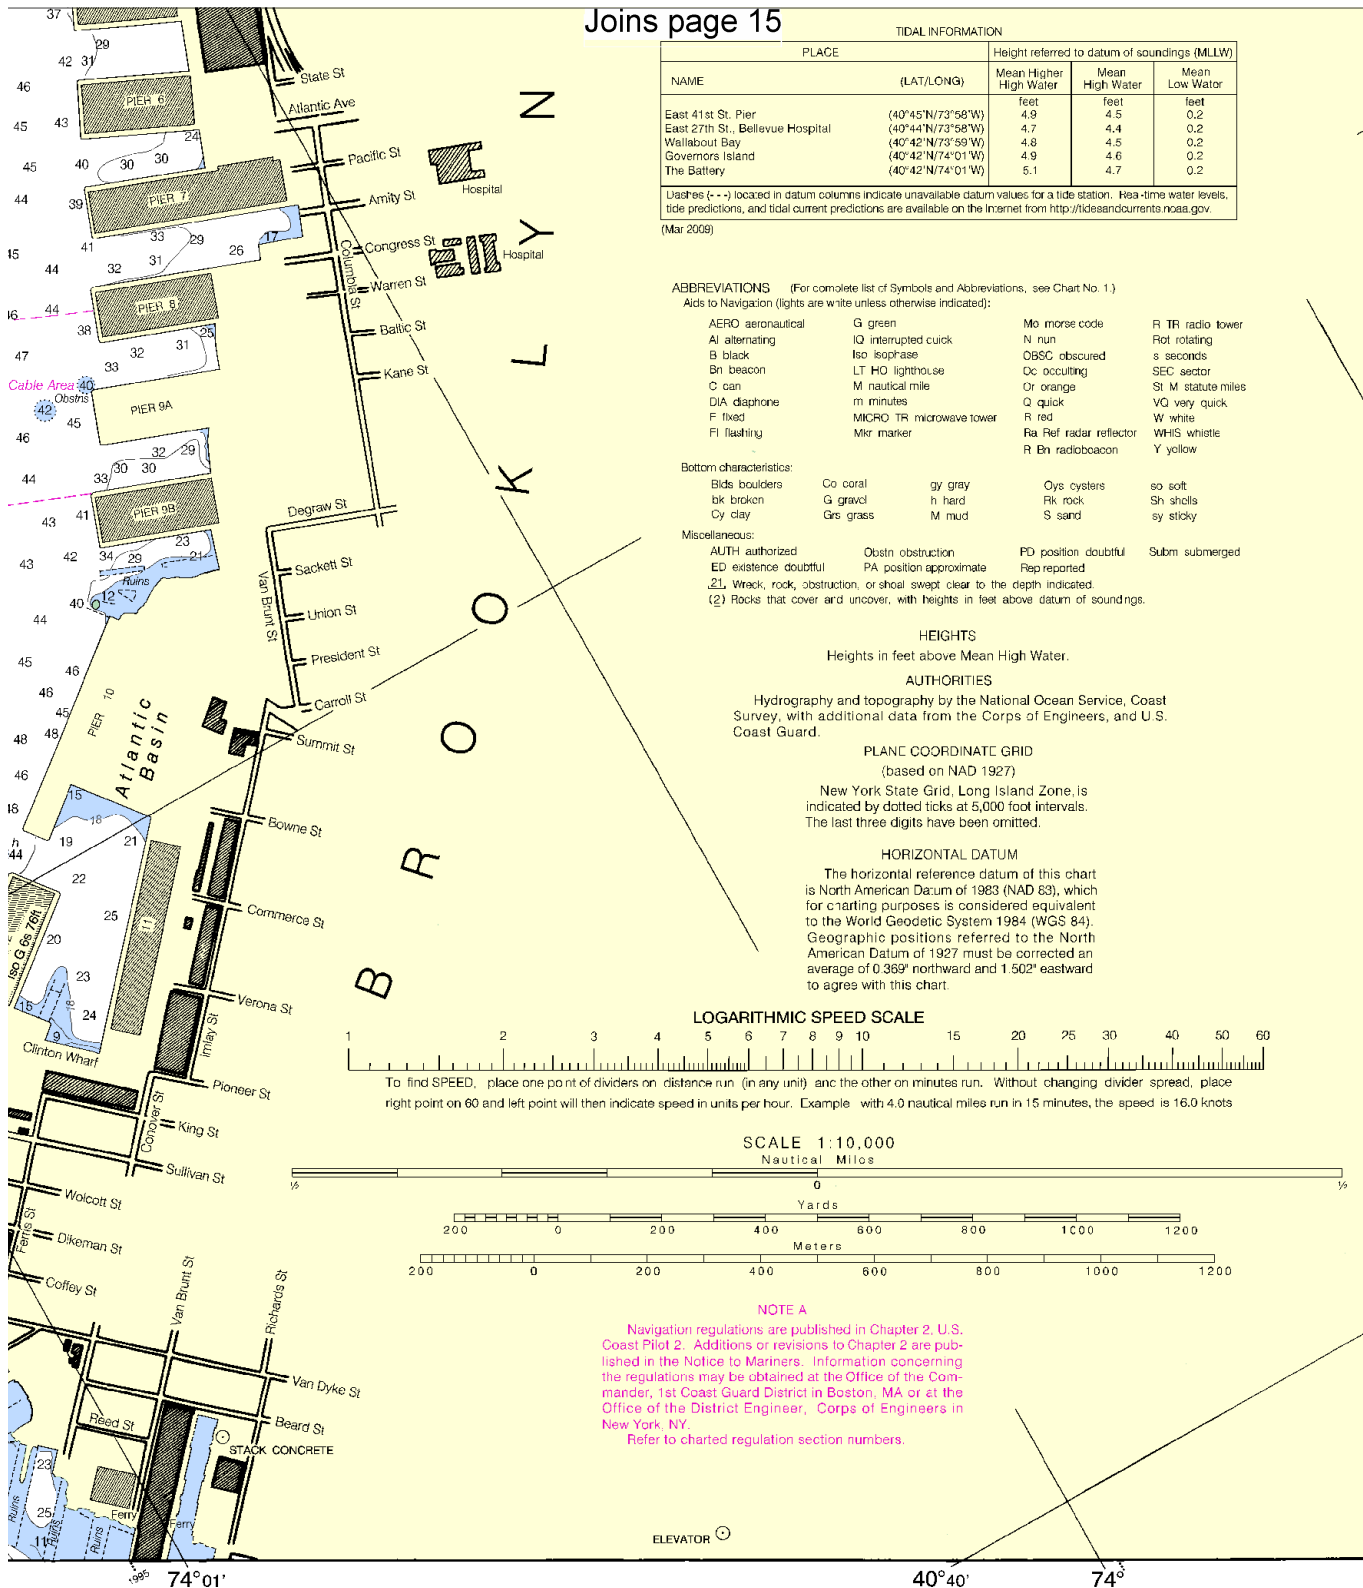

TIDAL INFORMATION				
NAME	PLACE (LAT/LONG)	Height referred to datum of soundings (MLLW)		
		Mean Higher High Water	Mean High Water	Mean Low Water
East 41st St. Pier	(40°45'N/73°58'W)	4.9	4.5	0.2
East 27th St., Bellevue Hospital	(40°44'N/73°58'W)	4.7	4.4	0.2
Wallabout Bay	(40°42'N/73°59'W)	4.8	4.5	0.2
Governors Island	(40°42'N/74°01'W)	4.9	4.6	0.2
The Battery	(40°42'N/74°01'W)	5.1	4.7	0.2

Dashes (---) located in datum columns indicate unavailable datum values for a tide station. Real-time water levels, tide predictions, and tidal current predictions are available on the Internet from <http://tidesandcurrents.noaa.gov>. (Mar 2009)

#### ABBREVIATIONS (For complete list of Symbols and Abbreviations, see Chart No. 1.)

Aids to Navigation (lights are white unless otherwise indicated):

AERO aeronautical	G green	Mo morse code	R TR radio tower
Al alternating	IQ interrupted quick	N run	Rot rotating
B black	Is isophase	OBSC obscured	s seconds
Bn beacon	LT lighthouse	OC occulting	SEC sector
C can	M nautical mile	Or orange	St M statute miles
DIA diaphone	m minutes	Q quick	VQ very quick
F fixed	MICRO TR microwave tower	R red	W white
Fl flashing	Mir marker	Ra Ref radar reflector	WHIS whistle
		R Bn radiobeacon	Y yellow

#### Bottom characteristics:

Blbs boulders	Co coral	gy gray	Oys oysters	so soft
bk broken	G gravel	h hard	Rk rock	Sh shells
Cy clay	Gr grass	M mud	S sand	sy sticky

#### Miscellaneous:

AUTH authorized	Obstn obstruction	PD position doubtful	Subm submerged
ED existence doubtful	PA position approximate	Rep reported	
21. Wreck, rock, obstruction, or shoal swept clear to the depth indicated.			
(2) Rocks that cover and uncover, with heights in feet above datum of soundings.			

#### HEIGHTS

Heights in feet above Mean High Water.

#### AUTHORITIES

Hydrography and topography by the National Ocean Service, Coast Survey, with additional data from the Corps of Engineers, and U.S. Coast Guard.

#### PLANE COORDINATE GRID

(based on NAD 1927)

New York State Grid, Long Island Zone, is indicated by dotted ticks at 5,000 foot intervals. The last three digits have been omitted.

#### HORIZONTAL DATUM

The horizontal reference datum of this chart is North American Datum of 1983 (NAD 83), which for charting purposes is considered equivalent to the World Geodetic System 1984 (WGS 84). Geographic positions referred to the North American Datum of 1927 must be corrected an average of 0.369° northward and 1.502° eastward to agree with this chart.


#### LOGARITHMIC SPEED SCALE



To find SPEED, place one point of dividers on distance run (in any unit) and the other on minutes run. Without changing divider spread, place right point on 60 and left point will then indicate speed in units per hour. Example: with 4.0 nautical miles run in 15 minutes, the speed is 16.0 knots

#### SCALE 1:10,000

Nautical Miles



#### NOTE A

Navigation regulations are published in Chapter 2, U.S. Coast Pilot 2. Additions or revisions to Chapter 2 are published in the Notice to Mariners. Information concerning the regulations may be obtained at the Office of the Commander, 1st Coast Guard District in Boston, MA or at the Office of the District Engineer, Corps of Engineers in New York, NY. Refer to charted regulation section numbers.

ELEVATOR

FATHOMS	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
FEET	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102
METERS	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17

Hudson and East Rivers  
SOUNDINGS IN FEET - SCALE 1:10,000

12335

## EMERGENCY INFORMATION

### VHF Marine Radio channels for use on the waterways:

**Channel 6** – Inter-ship safety communications.

**Channel 9** – Communications between boats and ship-to-coast.

**Channel 13** – Navigation purposes at bridges, locks, and harbors.

**Channel 16 – Emergency, distress and safety calls** to Coast Guard and others, and to initiate calls to other vessels. Contact the other vessel, agree to another channel, and then switch.

**Channel 22A** – Calls between the Coast Guard and the public. Severe weather warnings, hazards to navigation and safety warnings are broadcast here.

**Channels 68, 69, 71, 72 & 78A** – Recreational boat channels.

### Distress Call Procedures

1. Make sure radio is on.
2. Select Channel 16.
3. Press/Hold the transmit button.
4. Clearly say: "MAYDAY, MAYDAY, MAYDAY."
5. Also give: Vessel Name and/or Description; Position and/or Location; Nature of Emergency; Number of People on Board.
6. Release transmit button.
7. Wait for 10 seconds – If no response Repeat MAYDAY Call.

### **HAVE ALL PERSONS PUT ON LIFE JACKETS !!**

### Mobile Phones – Call 911 for water rescue.

**Coast Guard Group Activities New York** – 718-354-4120

**Coast Guard Kings Point** – 516-466-7135

**Coast Guard New York** – 718-354-4101

**New York State Police** – 877-672-4911

**New York City Police** – 718-765-4100

**Coast Guard Atlantic Area Cmd** – 757-398-6390

**NOAA Weather Radio** – 162.400 MHz, 162.425 MHz, 162.450 MHz, 162.475 MHz, 162.500 MHz, 162.525 MHz, 162.550 MHz.

**Getting and Giving Help** – Signal other boaters using visual distress signals (flares, orange flag, lights, arm signals); whistles; horns; and on your VHF radio. You are required by law to help boaters in trouble. Respond to distress signals, but do not endanger yourself.



## NOAA CHARTING PUBLICATIONS

**Official NOAA Nautical Charts** – NOAA surveys and charts the national and territorial waters of the U.S, including the Great Lakes. We produce over 1,000 traditional nautical charts covering 3.4 million square nautical miles. Carriage of official NOAA charts is mandatory on the commercial ships that carry our commerce. They are used on every Navy and Coast Guard ship, fishing and passenger vessels, and are widely carried by recreational boaters. NOAA charts are available from official chart agents listed at: [www.NauticalCharts.NOAA.gov](http://www.NauticalCharts.NOAA.gov).

**Official Print-on-Demand Nautical Charts** – These full-scale NOAA charts are updated weekly by NOAA for all Notice to Mariner corrections. They have additional information added in the margin to supplement the chart. Print-on-Demand charts meet all federal chart carriage regulations for charts and updating. Produced under a public/private partnership between NOAA and OceanGrafix, LLC, suppliers of these premium charts are listed at [www.OceanGrafix.com](http://www.OceanGrafix.com).

**Official Electronic Navigational Charts (NOAA ENC<sup>®</sup>)** – ENCs are digital files of each chart's features and their attributes for use in computer-based navigation systems. ENCs comply with standards of the International Hydrographic Organization. ENCs and their updates are available for free from NOAA at [www.NauticalCharts.NOAA.gov](http://www.NauticalCharts.NOAA.gov).

**Official Raster Navigational Charts (NOAA RNC<sup>™</sup>)** – RNCs are geo-referenced digital pictures of NOAA's charts that are suitable for use in computer-based navigation systems. RNCs comply with standards of the International Hydrographic Organization. RNCs and their updates are available for free from NOAA at [www.NauticalCharts.NOAA.gov](http://www.NauticalCharts.NOAA.gov).

**Official BookletCharts<sup>™</sup>** – BookletCharts<sup>™</sup> are reduced scale NOAA charts organized in page-sized pieces. The "Home Edition" can be downloaded from NOAA for free and printed. The Internet address is [www.NauticalCharts.gov/bookletcharts](http://www.NauticalCharts.gov/bookletcharts).

**Official PocketCharts<sup>™</sup>** – PocketCharts<sup>™</sup> are for beginning recreational boaters to use for planning and locating, but not for real navigation. Measuring a convenient 13" by 19", they have a 1/3 scale chart on one side, and safety, boating, and educational information on the reverse. They can be purchased at retail outlets and on the Internet.

**Official U.S. Coast Pilot<sup>®</sup>** – The Coast Pilots are 9 text volumes containing information important to navigators such as channel descriptions, port facilities, anchorages, bridge and cable clearances, currents, prominent features, weather, dangers, and Federal Regulations. They supplement the charts and are available from NOAA chart agents or may be downloaded for free at [www.NauticalCharts.NOAA.gov](http://www.NauticalCharts.NOAA.gov).

**Official On-Line Chart Viewer** – All NOAA nautical charts are viewable here on-line using any Internet browser. Each chart is up-to-date with the most recent Notices to Mariners. Use these on-line charts as a ready reference or planning tool. The Internet address is [www.NauticalCharts.gov/viewer](http://www.NauticalCharts.gov/viewer).

**Official Nautical Chart Catalogs** – Large format, regional catalogs are available for free from official chart agents. Page size, state catalogs are posted on the Internet and can be printed at home for free. Go to <http://NauticalCharts.NOAA.gov/mcd/ccatalogs.htm>.

**Internet Sites:** [www.NauticalCharts.NOAA.gov](http://www.NauticalCharts.NOAA.gov), [www.NOAA.gov](http://www.NOAA.gov), [www.TidesandCurrents.NOAA.gov](http://www.TidesandCurrents.NOAA.gov), [www.NOS.NOAA.gov](http://www.NOS.NOAA.gov).